




FOLDING TREADMILL

Model#TM2202

LIFE SMART® is a registered trademark of

Supply Chain Sources LLC., All Rights Reserved.

Operating Instructions Manual

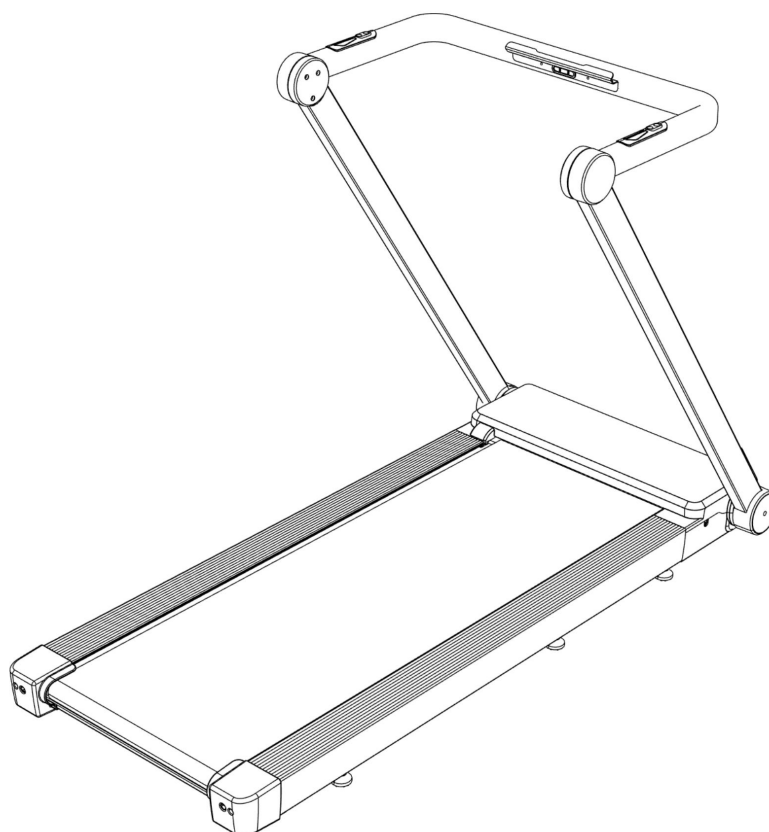

Special tips:

1. Before installation and operation, please read this operation manual carefully.
2. Please save this manual for future reference.
3. Product may vary slightly from the item pictures due to model upgrades.



Questions, problems, missing parts? Contact technical support department at **657-341-0362, 9:00 a.m. - 5 p.m., PST, Monday - Friday** or contact us via email at **support@scsources.com**.

Please have your model and serial number ready

Scan QR Code to Visit Registration Page:



TABLE OF CONTENTS

IMPORTANT SAFETY INSTRUCTION -----	1-2
IMPORTANT OPERATING INSTRUCTIONS -----	3
ASSEMBLY PARTS LIST AND TOOLS REQUIRED -----	4
ASSEMBLE & UNFOLD THE TREADMILL -----	5-8
FOLD & MOVE THE TREADMILL -----	9-11
IMPORTANT ELECTRICAL INFORMATION -----	12
WALKING MODE&RUNNING MODE -----	13
OPERATION GUIDE -----	14-19
TROUBLESHOOTING -----	20-21
MAINTENANCE & CARE -----	22
LUBRICATING THE TREADMILL -----	23
EXPLODED DRAWING -----	24-25
PARTS LIST -----	26-27
ONE-YEAR LIMITED WARRANTY-----	28

IMPORTANT SAFETY INSTRUCTION

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using this treadmill.

DANGER—To reduce the risk of electrical shock: Always unplug this appliance from the electrical outlet immediately after using and before cleaning.

WARNING—To reduce the risk of burns, fire, electric shock, or injury to persons:

1. The treadmill should never be left unattended when plugged in. Unplug from the outlet when not in use and before putting on or removing parts.
2. Use this treadmill only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
3. Never operate this treadmill if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return this treadmill to a service center for examination or repair.
4. Keep the cord away from heated surfaces.
5. Never operate the treadmill with the air openings blocked. Keep the air openings free of lint, hair, and alike items.
6. Never drop or insert any object into any opening.
7. Do not use outdoors.
8. Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
9. To disconnect, turn the treadmill off, then remove plug from outlet.
10. Connect this treadmill to a properly grounded outlet only. See grounding instructions.

CAUTION—To avoid injury, use extreme caution when stepping onto or off of a moving belt. Read instruction manual before using.

IMPORTANT SAFETY INSTRUCTION



 


 

 


To ensure your safety and health, please use this equipment correctly. It is important to read this entire manual before assembling and using the equipment. Safe and effective use can only be achieved if the equipment is assembled, maintained, and used properly. It is your responsibility to ensure that all users of the equipment are informed of all warnings and precautions.

1. Before starting any exercise program, you should consult your physician to determine if you have any medical or physical conditions that could put your health and safety at risk or prevent you from using the equipment properly. Your physician's advice is essential if you are taking medication that affects your heart rate, blood pressure or cholesterol level.
2. Be aware of your body's signals. Incorrect or excessive exercise can damage your health. Stop exercising if you experience any of the following symptoms: pain, tightness in your chest, irregular heartbeat, shortness of breath, dizziness, or feelings of nausea. If you do experience any of these conditions, you should consult your physician before continuing with your exercise program.
3. Keep children and pets away from the equipment. The equipment is designed for adult use only.
4. Use the equipment on a solid, flat level surface with a protective cover for your floor or carpet. To ensure safety, the equipment should have at least 8 feet (240CM) of free space behind it and 2 feet (60CM) on each side. Do not place the treadmill on any surface that blocks air openings. To protect the floor or carpet from damage, place a mat under the treadmill.
5. Ensure that all nuts and bolts are securely tightened before using the equipment. The safety of the equipment can only be maintained if it is regularly examined for damage and/or wear and tear.
6. Always use the equipment as indicated. If you find any defective components while assembling or checking the equipment, or if you hear any unusual noises coming from the equipment during exercise, discontinue use of the equipment immediately and do not use until the problem has been rectified.
7. Wear suitable clothing while using the equipment. Avoid wearing loose clothing that may become entangled in the equipment.
8. Do not place fingers or objects into the moving parts of the equipment.
9. The equipment is not suitable for therapeutic use.
10. To avoid bodily injury and/or damage to the product or property, proper lifting and moving is required.
11. Your product is intended for use in cool, dry conditions. You should avoid storage in extreme cold, hot or damp areas as this may lead to corrosion and other related problems.
12. This equipment is designed for indoor and home use only, it is not intended for commercial use.

IMPORTANT OPERATING INSTRUCTIONS


1. Insert the power plug directly into the socket.
2. Read the manual before operating the equipment.
3. Changes in speed do not occur immediately.
4. While on the treadmill, move with caution as distractions may cause you to lose balance and stray from walking in the center of the belt. This may result in serious injury.
5. This unit starts at a low speed. To begin use, stand on the side rails while it starts up, then step onto the belt once it's in motion.
6. A safety key is provided for emergency use. The treadmill will function only if the safety key is inserted into the computer console. In case of emergency, remove the safety key to immediately stop the belt and shut off the treadmill. The display screen will reset once the safety key is reinserted.
7. This equipment is designed for adult use only! Children should not be allowed to use or play near this equipment. When present, children should always be supervised by an adult.
8. Women who are pregnant or nursing should consult a physician before attempting to begin any exercise program.
9. Always stay hydrated during and after exercise.
10. Do not lift the treadmill.
11. The belt must be lubricated before the first use.

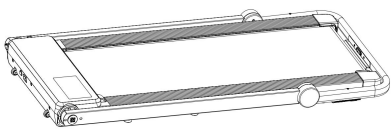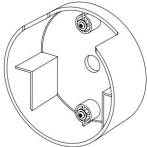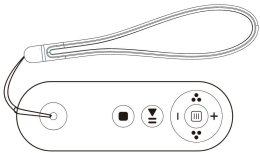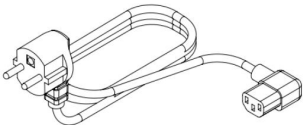ASSEMBLY PARTS LIST AND TOOLS REQUIRED


	Part No.	Description	Quantity
		Treadmill frame	1
	16	Upright side cover	2
	87	Lubrication oil	1
	70+78	Remote control with rope	1
	82	Power wire	1
	67	Magnet	1
	81	Safety key	1
	86	Allen wrench	1
	85	L-shaped wrench	1
	64	Desktop (Optional)	1

ASSEMBLE&UNFOLD THE TREADMILL


STEP 1: Attach round magnet(No.67) to the right upright tube. Fix 2pcs of upright side covers(No.16) to the L&R upright tubes.

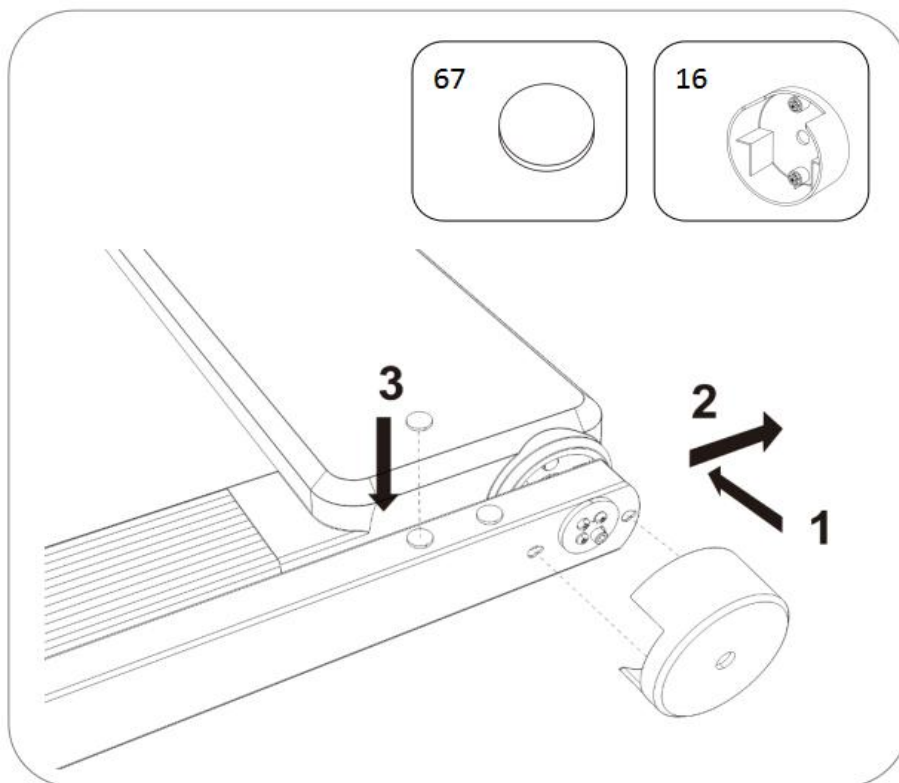


STEP 2: Using L-shaped wrench (No.85) , turn the bolt on the right upright tube in an anti-clockwise direction to unlock.

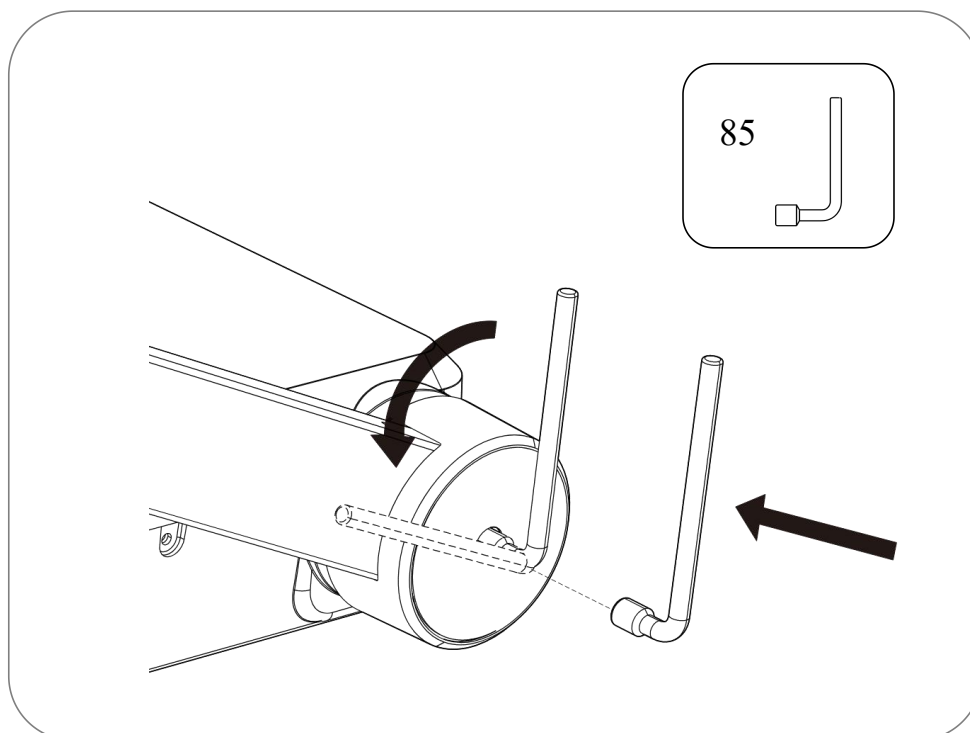

STEP 3: Lift up the upright tube when machine is unlocked.

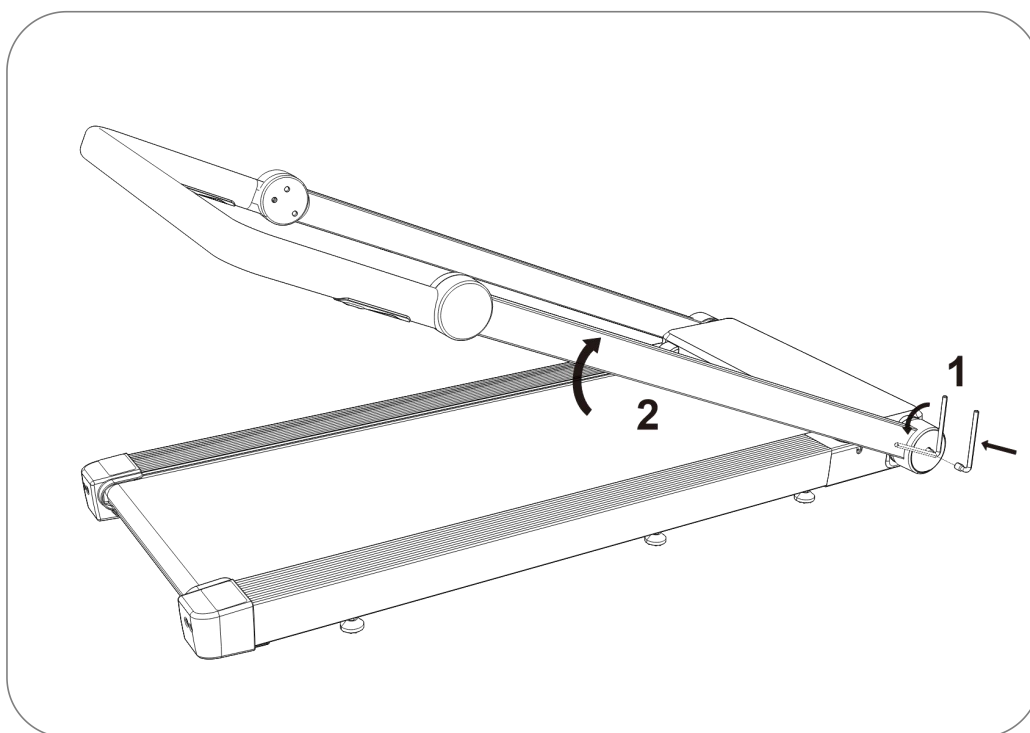


STEP 4: Press the handle bar.

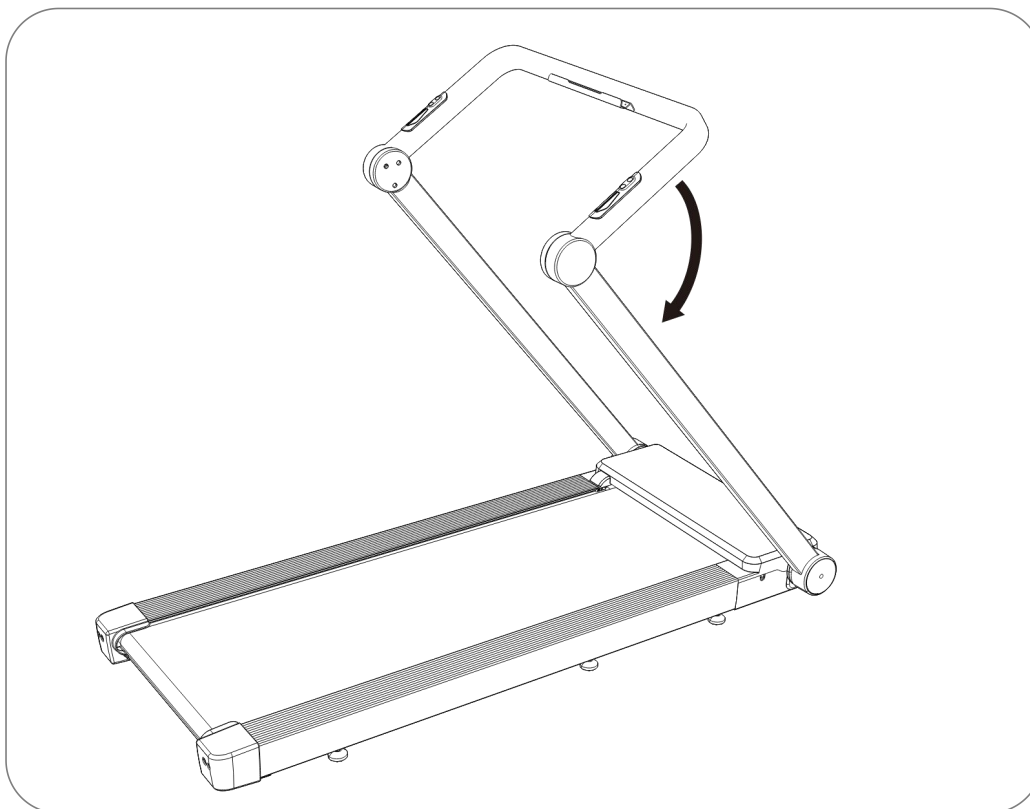


STEP 5: Lock the console. Using L-shaped wrench (No.85) , turn the bolt on the left handle bar cover in clockwise direction to lock the console.



STEP 6: Attach the L-shaped wrench (No.85) to the round magnet(No.67).

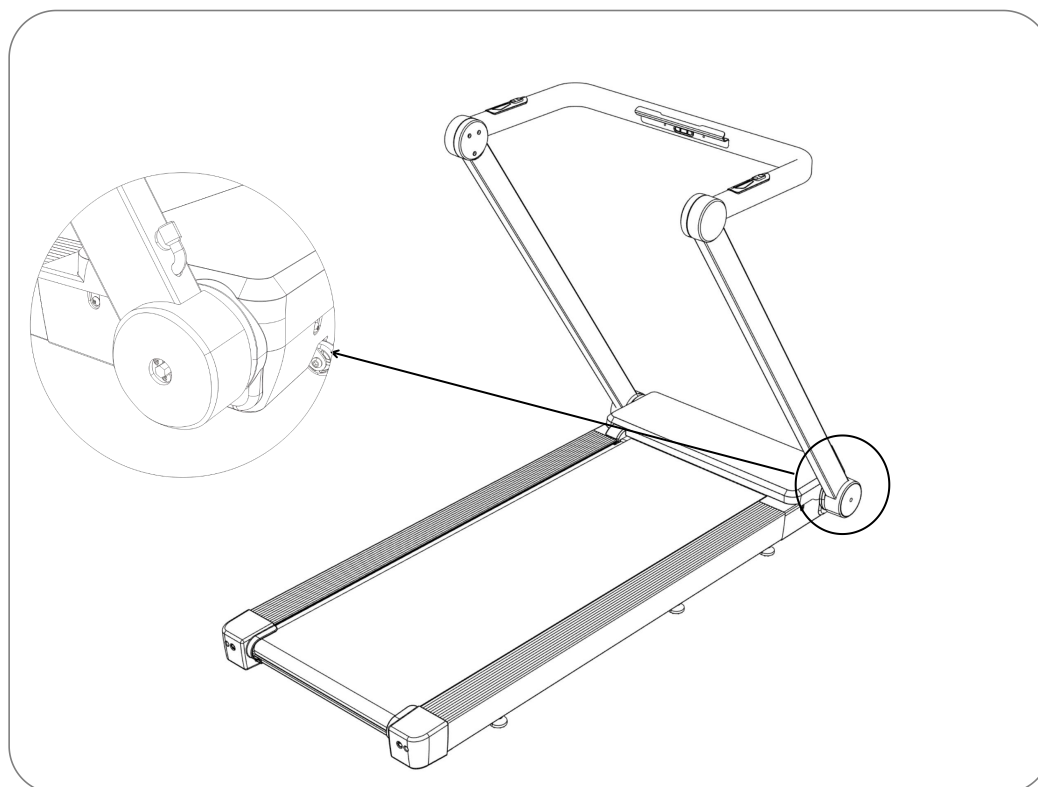


STEP 7: Insert the safety key.

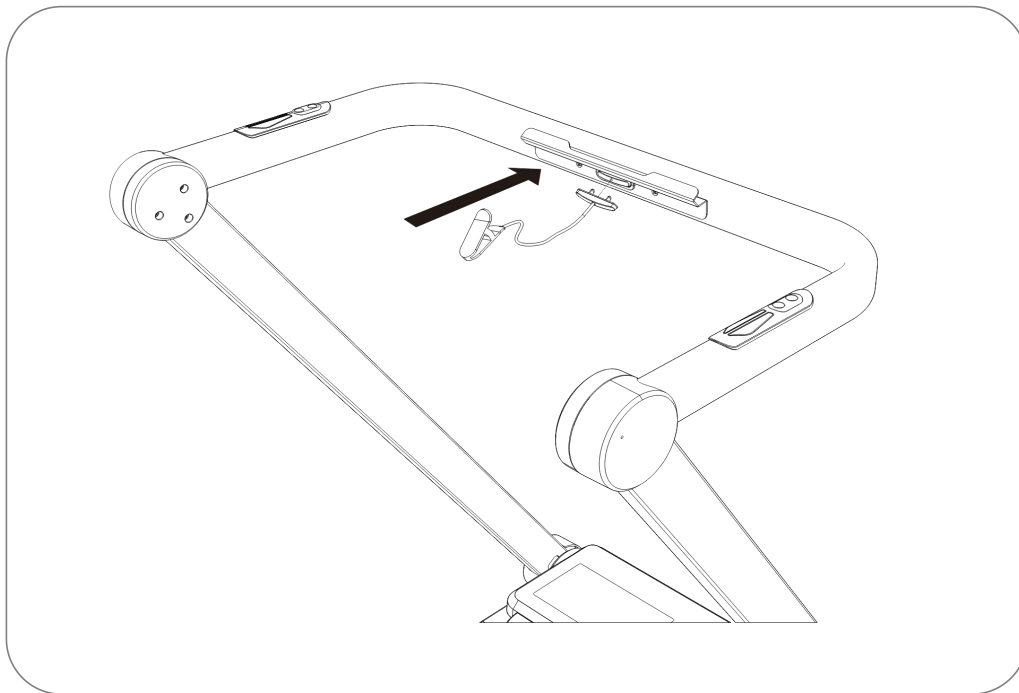


STEP 8 (Optional): Desktop is an optional part as per your order.

Put the desktop on handle bar in case you need it. We recommend using desktop only under walking mode.

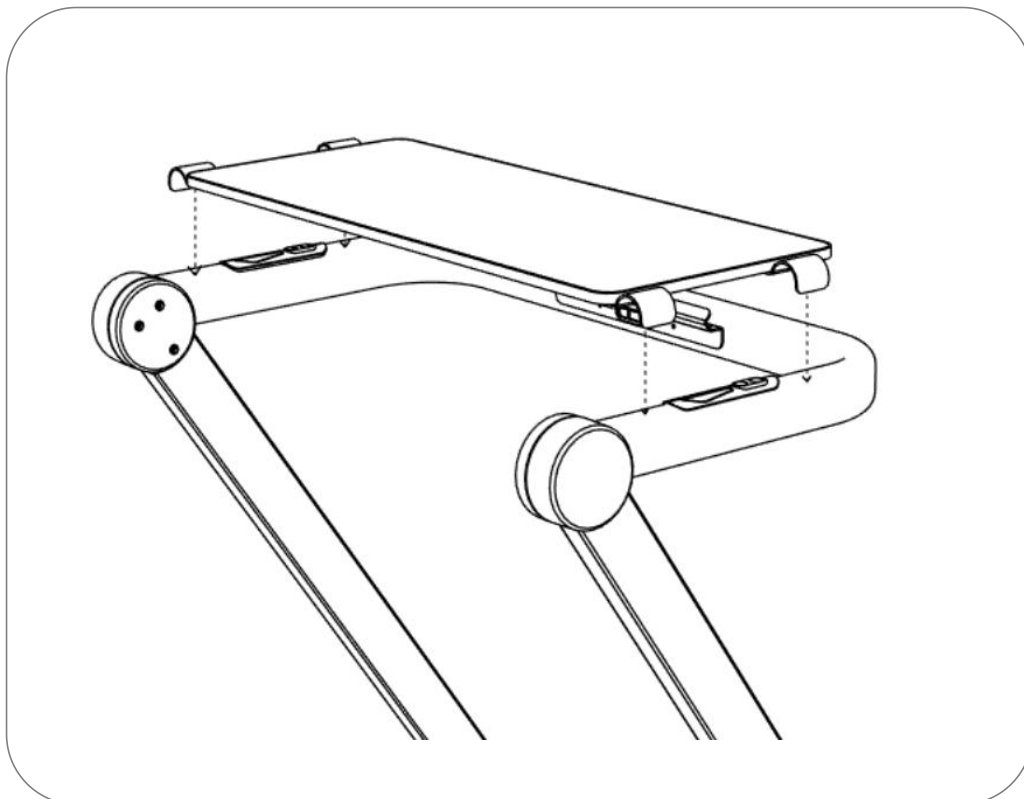


FOLD&MOVE THE TREADMILL


STEP 1: Unlock the console. Using L-shaped wrench (No.85) , turn the bolt on the left handle bar cover in an anti-clockwise direction to unlock the console.

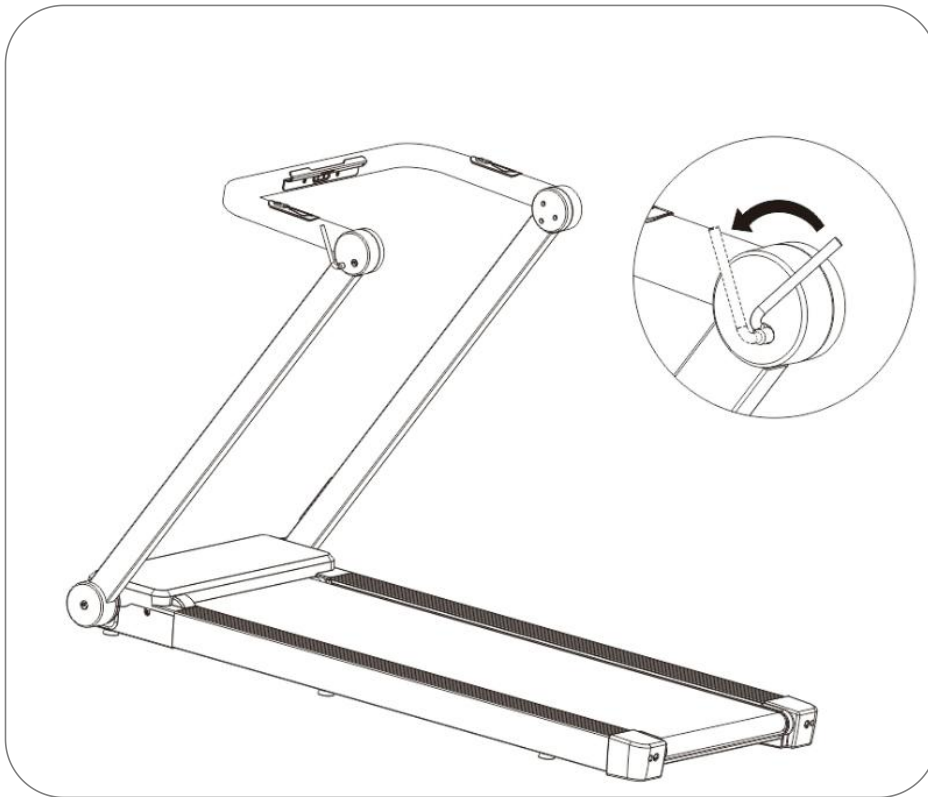


STEP 2: Lift up the handle bar.

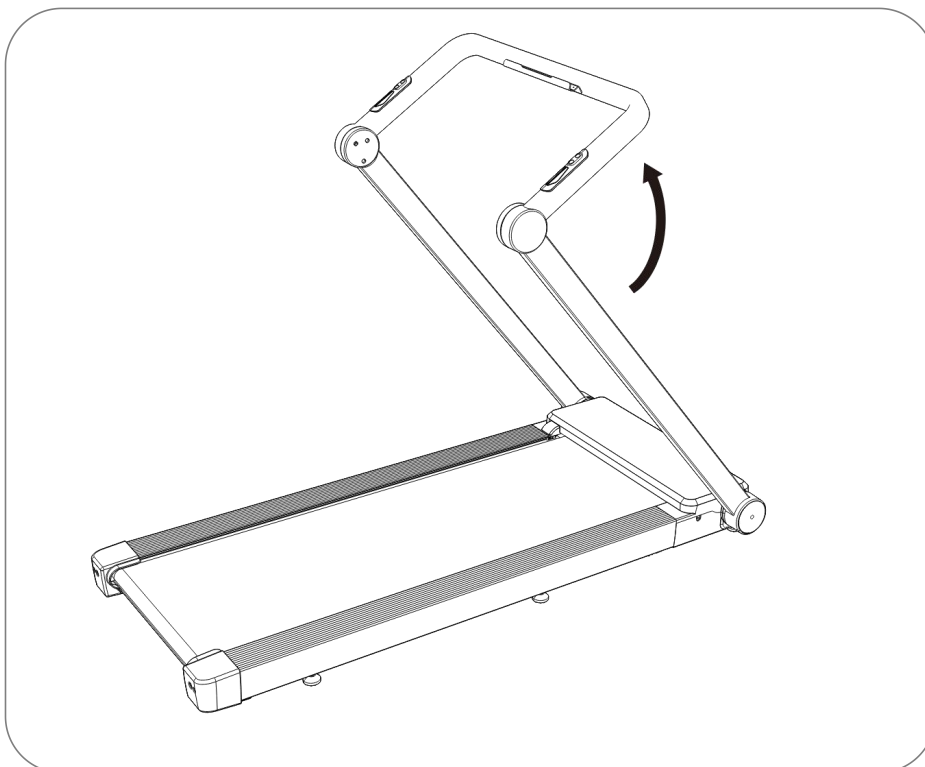


STEP 3: Hold the right upright tube.

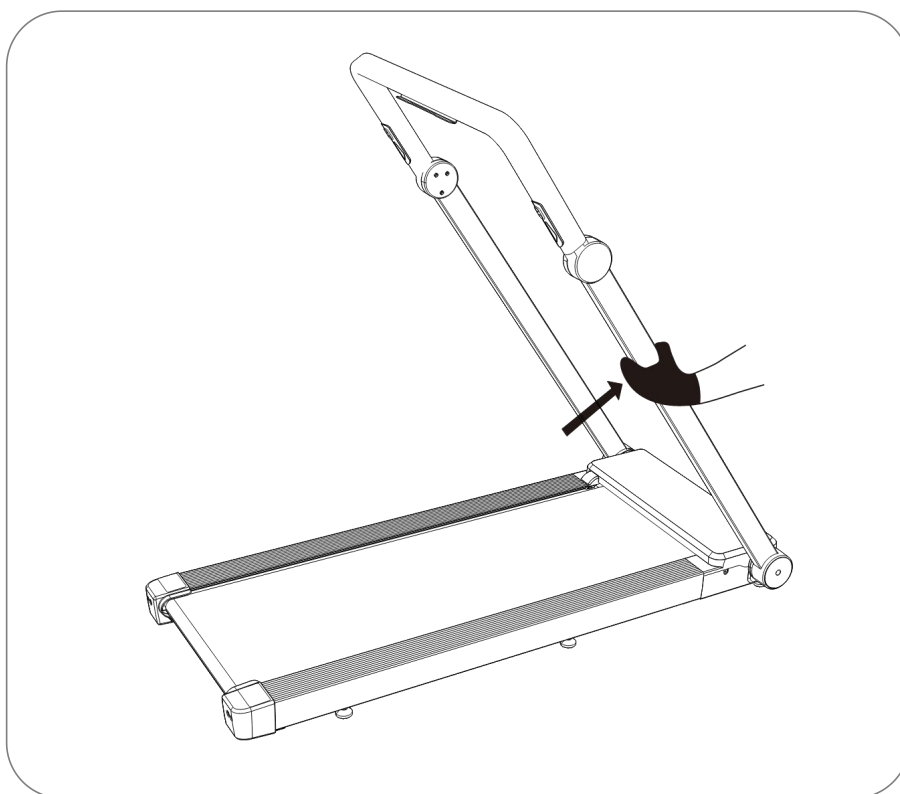


STEP 4: Using L-shaped wrench (No.85) , turn the bolt on the right upright tube in an anti-clockwise direction to unlock.

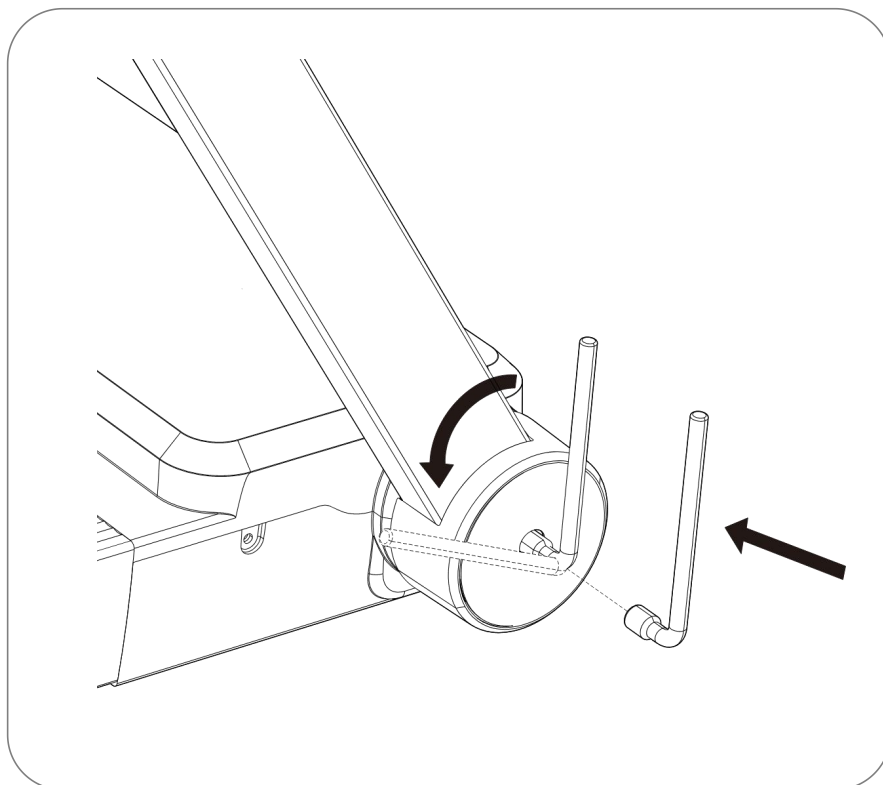

STEP 5: Fold the upright tubes down with hand to avoid sudden falling.

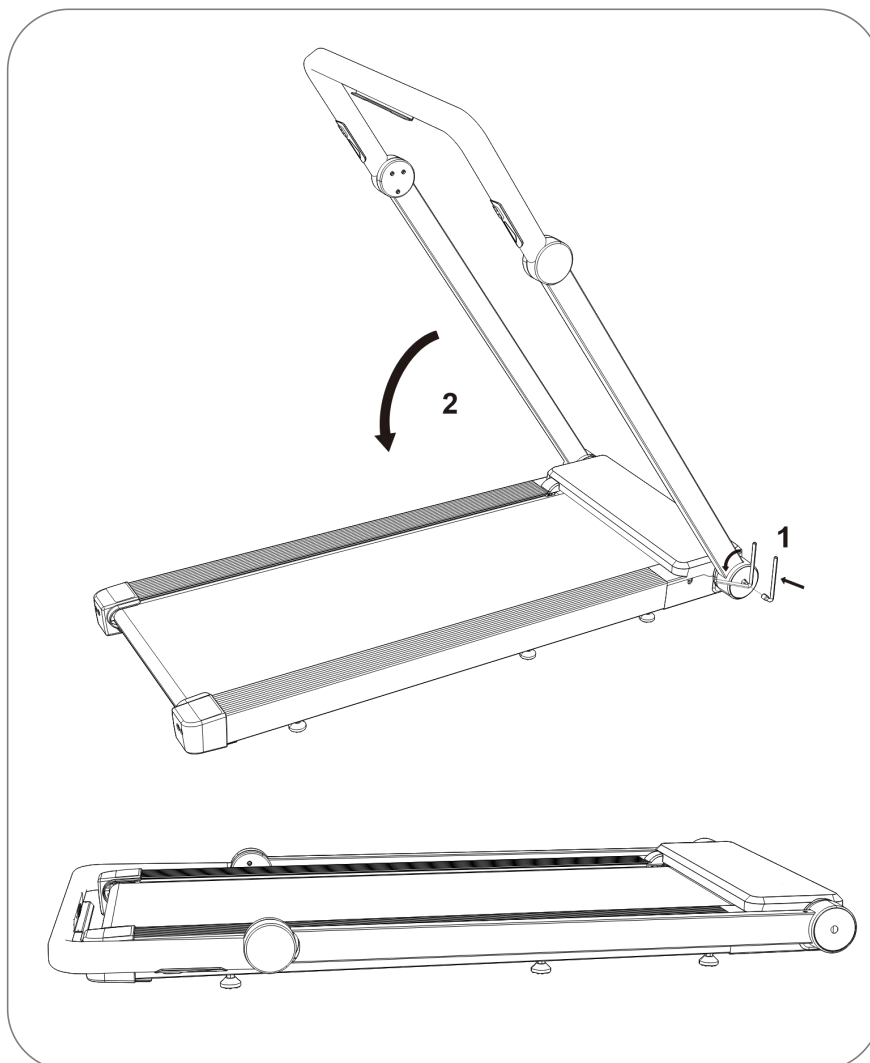

STEP 6: Lift up the back end of machine for moving.

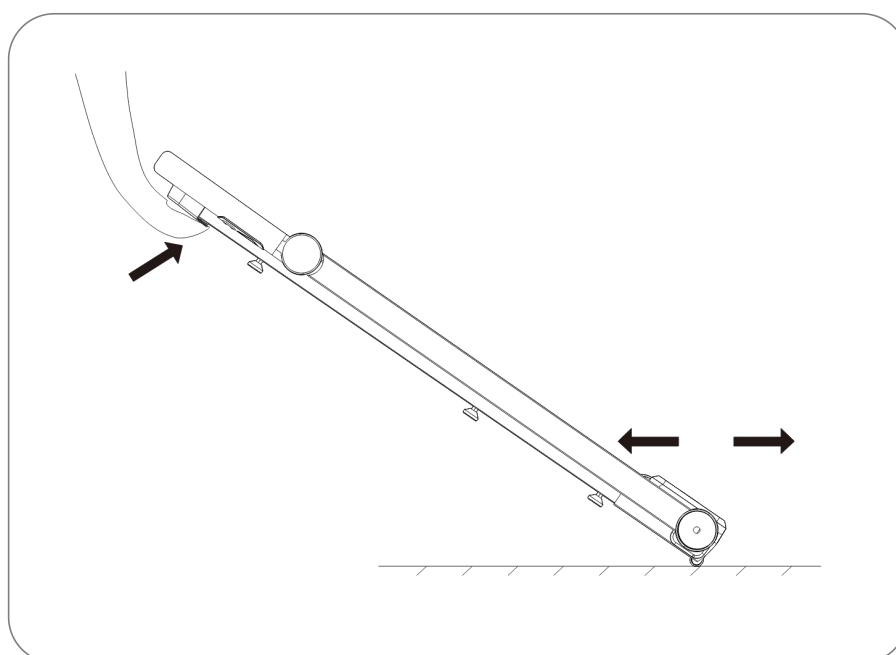

IMPORTANT ELECTRICAL INFORMATION

WARNING:

This treadmill requires a right power source in order to properly operate. For your safety, as well as the safety of others, please verify that the power source is correct before plugging the equipment. Any incorrect power source could cause significant damage to the equipment and or user.

GROUNDING METHODS:

This product must be grounded. Grounding provides the least resistance for electrical current and will reduce the risk of electric shock. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances. Ensure that the product is connected to an outlet which contains the same configuration as the plug. Do not use an adaptor for this product.

This product is for use on a nominal circuit and has a grounding plug that looks like the plug illustrated in sketch A. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.


DANGER:

Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a certified electrician if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product. If it will not fit the outlet, have a proper outlet installed by an electrician.

WARNING!

1. NEVER use a ground fault circuit interrupt (GFCI) wall outlet with this treadmill. Route the power cord away from any moving part of the treadmill including the elevation mechanism and transport wheels.
2. NEVER operate the treadmill using a generator or UPS power supply.
3. NEVER remove any cover without first disconnecting power.
4. NEVER expose the treadmill to rain or moisture. This treadmill is not designed for use outdoors, near pools or in any other high humidity environment.

Grounding methods

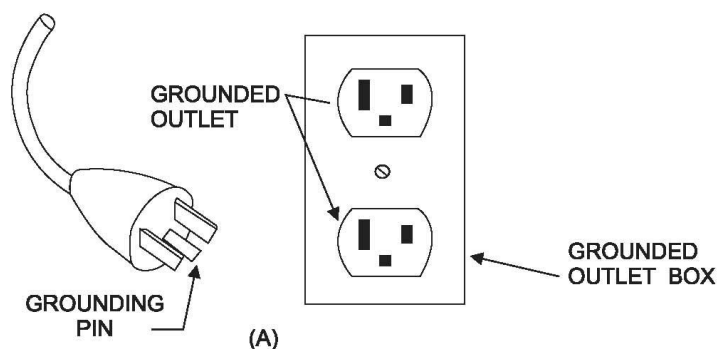


WALKING MODE&RUNNING MODE

This machine can transfer between walking mode and running mode.

WLAKING MODE:

When machine is folded flat,can be used as walking treadmill, during walking mode, the speed rang is from 0.6-3.7mph.

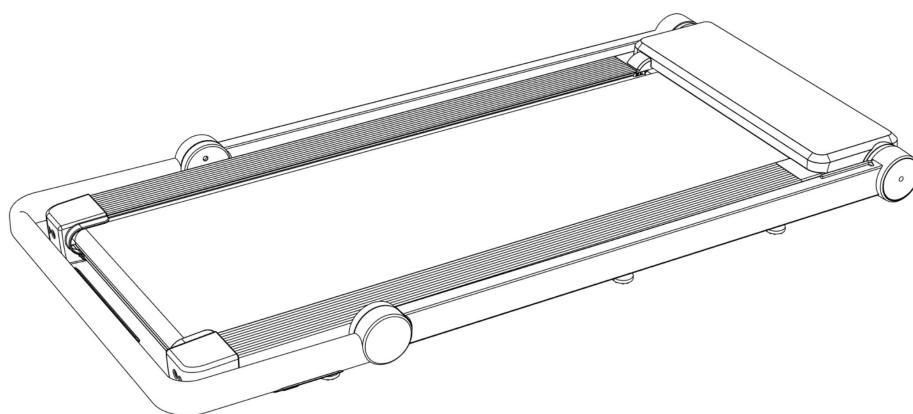


RUNNING MODE:

When machine is unfolded,can be used as running treadmill, during running mode, the speed rang is from 0.6-7.5mph.




OPERATION GUIDE

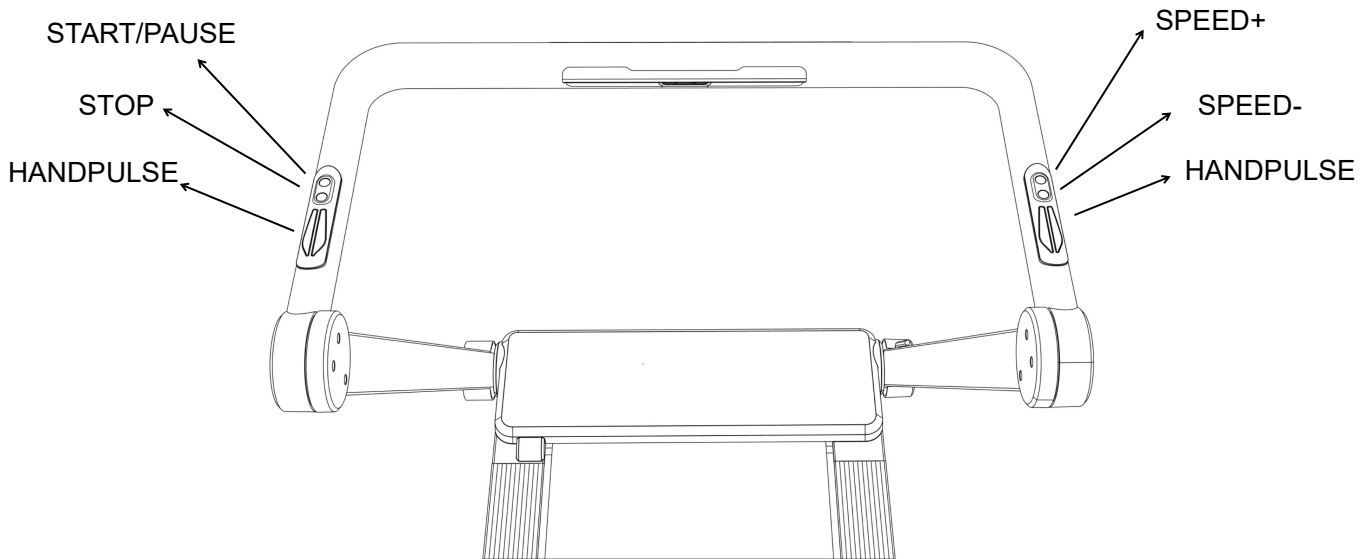

HANDLE BAR FUNCTION:


1. **START//PAUSE:** Press this button to start or pause, after pause, press this button again to restart.
2. **STOP:** Press this button to stop.
3. **SPEED +:** Press this button to increase the speed.
4. **SPEED -:** Press this button to reduce the speed.
5. **HANDPULSE:** Hold the hand pulse sensor by both hands, the display will show user's pulse value after about 5 seconds.



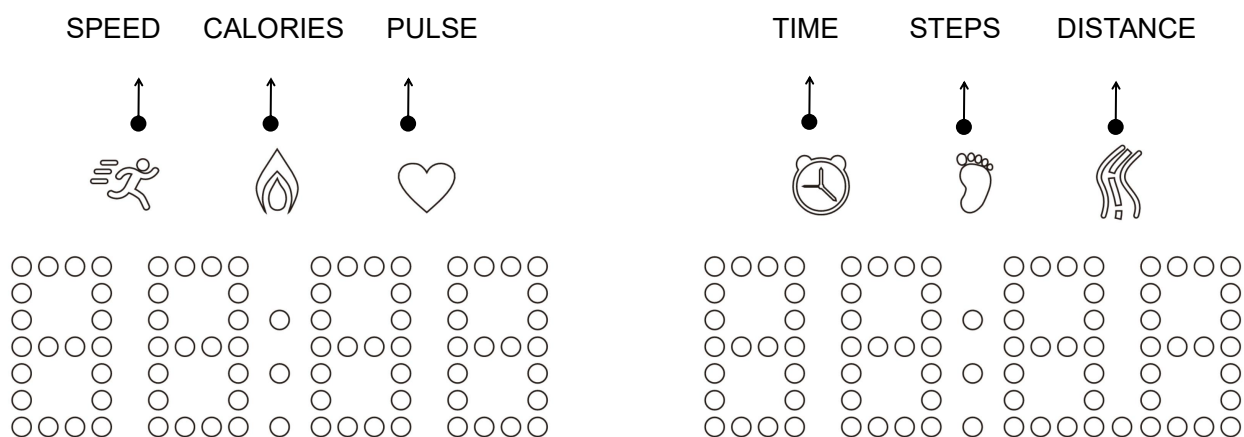


WINDOW DISPLAY:



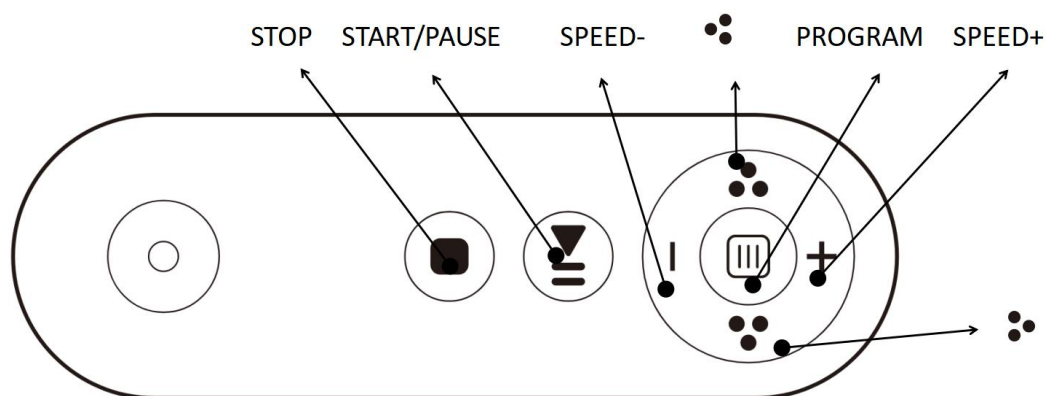


1. **SPEED:** Display current speed. Press SPEED+/- to adjust the speed of the machine.
When you fold down the upright tubes, the machine will be under walking mode, the speed range will be 0.6-3.7mph.
When you fold up the upright tubes, the machine will be under running mode, the speed range will be 0.6-7.5mph.
 2. **CALORIES:** Display the calories has consumed.
 3. **PULSE:** Display the current pulse. Hold the hand pulse sensor by both hands, the console will show user's pulse value after about 5 seconds. (This data is just for reference and can not be used as the medical data).
 4. **TIME:** Displays the time elapsed. Display starts at 0:00. When time elapsed reaches the maximum, the machine will continue running. It will start count again from 0:00.
 5. **STEPS:** Displays steps that the user has walked.
 6. **DISTANCE:** Display current distance.
- TIME/STEPS/DISTANCE share the same window, will show in turn every 3 seconds.

REMOTE CONTROL:



1. **STOP**  : Press this button to stop, all data will come to 0 if you press this button.
2. **START/PAUSE**  : Press this button to start or pause, after pause, press this button again to restart.
3. **“SPEED —”** :
Under walking or running mode, press this button to decrease the speed.
Under standby mode, after choose program, press this button to set time for program.
4. **“SPEED +”** :
Under walking or running mode, press this button to increase the speed.
Under standby mode, after choose program, press this button to set time for program.
5. **Speed quick button&Time count down**  :
5.1 Under walking mode,press this button to set quick speed of 2mph.
5.2 Under running mode,press this button to set quick speed of 3mph.
5.3 Under standby mode, after choose program,press this button will choose P1 to P9.
5.4 Under standby mode,if not choose program and press this button directly, will enter into time countdown mode. Press “+” or “-” buttons to set desired time,press  button to start.
6. **Speed quick button&Distance count down**  :
6.1 Under walking mode,press this button to set quick speed of 3.7mph.
6.2 Under running mode,press this button to set quick speed of 5mph.
6.3 Under standby mode, after choose program,press this button will choose P1 to P9.

6.4 Under standby mode, if not choose program and press this button directly, will enter distance countdown mode. Press “+” or “-” buttons to set desired distance, press  button to start.

7. **Program**  : Under standby mode, press this button to enter default programs, you can press speed quick buttons to choose program, and press “+” “-” buttons to set time for each programs. Press  button to start.

The interval program is divided into 10 sections. When the speed enters the next interval, the treadmill will beep, and the speed will be changed according to system setting. During the working of each section, press SPEED +/- buttons can change the SPEED, but the system will recover to default speed when enter into the next section. After finishing one program, the machine will gradually come to a stop.

		TIME INTERVAL= setting time/10 Programs under walking mode									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	1.9	1.9	1.9	1.9	1.9	1.9	1.3	1.9	1.9	1.9
P2	SPEED	1.9	2.5	2.5	2.5	2.5	2.5	1.9	2.5	2.5	2.5
P3	SPEED	2.5	3.1	3.1	3.1	3.1	3.1	2.5	3.1	3.1	3.1
P4	SPEED	1.9	3.7	3.7	3.7	3.7	3.7	1.9	3.7	3.7	1.9
P5	SPEED	1.9	3.1	1.9	3.1	1.9	3.1	1.9	3.1	1.9	3.1
P6	SPEED	2.2	3.4	2.2	3.4	2.2	3.4	2.2	3.4	2.2	3.4
P7	SPEED	1.9	3.1	3.1	1.9	3.1	3.1	1.9	3.1	3.1	1.9
P8	SPEED	2.2	3.4	3.4	2.2	3.4	3.4	2.2	3.4	3.4	2.2
P9	SPEED	2.5	3.7	3.7	2.5	3.7	3.7	2.5	3.7	3.7	2.5

		TIME INTERVAL= setting time/10 Programs under running mode									
		1	2	3	4	5	6	7	8	9	10
P1	SPEED	1.9	2.5	3.1	3.7	3.7	2.5	3.1	3.7	3.7	2.5
P2	SPEED	2.5	3.1	3.7	4.3	4.3	3.1	3.7	4.3	4.3	3.1
P3	SPEED	3.1	3.7	4.3	5.0	5.0	3.7	4.3	5.0	5.0	3.7
P4	SPEED	3.7	4.3	5.0	5.6	5.6	4.3	5.0	5.6	5.6	4.3
P5	SPEED	3.7	5.0	6.2	6.2	5.0	5.0	6.2	6.2	5.0	3.7
P6	SPEED	4.3	5.6	6.2	5.6	6.2	5.6	6.2	5.6	6.2	4.4
P7	SPEED	4.3	5.6	5.6	4.3	4.3	5.6	5.6	4.3	5.6	4.3
P8	SPEED	3.1	6.2	6.2	3.1	3.1	6.2	6.2	3.1	6.2	3.1
P9	SPEED	3.7	6.2	6.2	3.7	3.7	6.2	6.2	3.7	6.2	3.7

Battery Warning:

WARNING

- **INGESTION HAZARD:** This product contains a button cell or coin battery.
- **DEATH** or serious injury can occur if ingested.
- A swallowed button cell or coin battery can cause Internal Chemical Burns in as little as 2 hours.
- **KEEP** new and used batteries **OUT OF REACH OF CHILDREN**
- **SEEK IMMEDIATE MEDICAL ATTENTION** if a battery is suspected to be swallowed or inserted inside any part of the body.



1. Remove and immediately recycle or dispose of used batteries according to local regulations and keep away from children. DO NOT dispose of batteries in household trash or incinerate.
2. Even used batteries may cause severe injury or death.
3. Call a local poison control center for treatment information.
4. The type of the remote control compatible battery is CR2032: 3V.
5. Non-rechargeable batteries are not to be recharged.
6. Do not force discharge, recharge, disassemble, heat above 50°C/122°F or incinerate. Doing so may result in injury due to venting, leakage or explosion resulting in chemical burns.
7. Ensure the batteries are installed correctly according to polarity (+ and -).
8. Do not mix old and new batteries, different brands or types of batteries, such as alkaline, carbon-zinc, or rechargeable batteries.
9. Remove and immediately recycle or dispose of batteries from equipment not used for an extended period of time according to local regulations.
10. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep them away from children.

LUBRICATION REMIND FUNCTION:

This machine has lubrication remind function. After every total running distance of 187mile (300km), your treadmill needs to be maintained with oil. The system will remind with sound for every 10 seconds, and window will show "OIL". This means that your treadmill needs to be lubricated with oil. Please read the user's manual first, and add the oil to the middle part of running board. After you finishing lubrication, please hold on "STOP" button for 3 seconds, and the system warning sound will disappear.

TRANSFER BETWEEN KILOMETER&MILE:

Under standby mode, hold on "STOP" button for 5 seconds, you can transfer between "mile" and "kilometre". Display window will show "n" or "k", "n" means "mile", "k" means "kilometre".

SAFETY LOCK FUNCTION:

Under any mode, if you pull away the safety key, the machine will stop. The window will show "---" with reminding sound. The machine cannot work until safety key is inserted back.

POWER SAVING FUNCTION:

The machine is with energy saving function. Under standby mode, if without any operation for 10 minutes, the system will enter into energy saving mode, the display will be closed up. You can press any button to turn on the display.

AUTO STOP FUNCTION:

If machine is without any walking or running for 2 minutes, machine will PAUSE automatically. If machine is without any operation for 10 minutes under PAUSE, the machine will enter into energy saving mode, the display will be closed up. You can press any button to turn on the display.

POWER ON (I) AND POWER OFF (O)

Switch off the power: You can switch off the power to stop the treadmill, which won't be damaged at any time.

CAUTION:

1. We recommend that you maintain a slow speed at the beginning of a session and hold on to the handrails until you become comfortable and familiar with the treadmill.
2. Attach the magnet end of the safety pulling rope to the computer and also attach the clip of the safety pulling rope to your clothing.
3. To end your workout safely, press the STOP button or pull out the safety pulling rope, then the treadmill will stop immediately.

TROUBLESHOOTING

PROBLEM	POSSIBLE CAUSE	SUGGESTED ACTION
Treadmill will not start	Not plugged in	Plug cord into outlet
	Safety Key not inserted	Insert Safety Key
Running belt not centered	Running belt tension not correct on the left or right sides of the running board	Tighten the adjustment bolts on the left and right side of the rear roller
Display not working	Wires are not properly connected.	Check wire connections from the PCB to the control board.
E01: Software over current E02: Hardware over current	Over current	1. Power off and then restart to check if machine can work. 2.If can not work, then need to change a new control board.
E03: Too hot control board protection	Over current Damage of control board	1.Power off and then restart to check if machine can work. 2.If can not work, then need to change a new control board.
E04: Too low voltage protection	Too low voltage	1.Power off and then restart to check if machine can work. 2.If can not work, then need to change a new control board. 3.If voltage is normal but machine can not work, then need to change a new control board.
E05: Over voltage protection	Over voltage	1.Power off and then restart to check if machine can work. 2.If can not work, then need to change a new control board. 3.If voltage is normal but machine can not work, then need to change a new control board.

E06-E09, E11 Motor Abnormality	The incoming voltage is too low or too high. The control board is damaged.	Restart the treadmill. Check the incoming voltage to ensure it's correct.
	A moving part of the treadmill is stuck and therefore the motor is unable to rotate properly.	Inspect moving parts of the treadmill to ensure that they are operating correctly. Check the motor, listen for strange noise and check for a burning smell. Replace the motor if necessary. Check the control board, replace if damaged. Lubricate the treadmill.
	The motor wire is not connected or the motor is damaged.	Check motor wires to see if the motor is connected. If the wire has been punctured or damaged, you will need to replace it. If the problem is not rectified, you may need to replace the motor
E10: Overload protection	Over current	Over current, power off and then restart to check if machine can work. If the problem is not rectified, you may need to replace the control board or motor.
E12: Communication failure	The communication failure	Power off and then restart to check if machine can work. Check all connection wires from console to the control board. If the problem is not rectified, you may need to replace the control board or PCB board.

MAINTENANCE & CARE


General cleaning will help prolong the life and performance of your treadmill. Keep the unit clean and maintained by dusting the components on a regular basis. Clean both sides of the running belt to prevent dust from accumulating underneath the belt. Keep your running shoes clean so that dirt from your shoes does not wear out the running board and belt. Clean the surface of the running belt with a clean damp cloth.

- To better maintain the treadmill and prolong its life it is suggested that the machine be powered off for 10 minutes every 2 hours and fully powered off whenever not in use.
- A loose Running Belt will result in the runner sliding off when running, while too tight of a Running Belt will result in decrease to the motors performance and also create more friction between the roller and running belts. The most suitable tightness for the belts is pulled out 50-75mm from the Running Board.


CENTERING THE RUNNING BELT:

Place the treadmill on level ground and set it at 3.7-5.6 mph to check if the Running Belt drifts.


1. If the **Running Belt** moves to the **right**, turn the adjusting bolt on the right side $\frac{1}{4}$ turn *clockwise*, then turn the left adjustment bolt $\frac{1}{4}$ turn *counter-clockwise*. If the belt does not move, repeat this step until it centers. Refer to figure A.

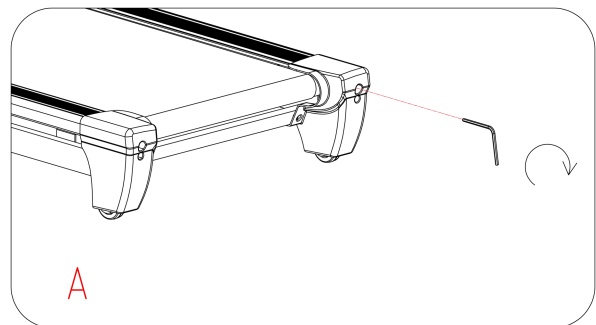

2. If the **Running Belt** moves to the **left**, turn the adjusting bolts on the left side $\frac{1}{4}$ of a turn *clockwise*, then turn the right adjustment bolt $\frac{1}{4}$ turn *counter-clockwise*. If the belt does not move, repeat this step until it centers. Refer to figure B.

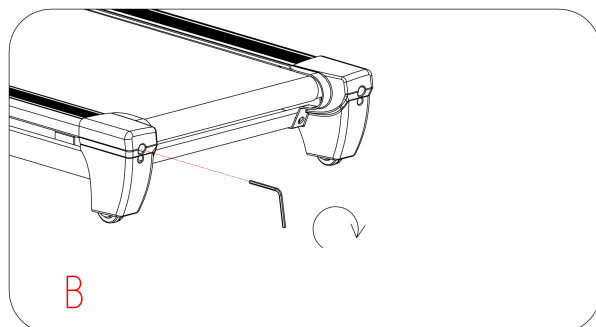

3. Over time the **Running Belt** will **loosen**. To tighten the belt turn the Left & Right side adjustment bolts one full turn clockwise, check the tension of the belt. Continue this process until belt is at the correct tension. Make sure to adjust both sides equally to ensure correct belt alignment. Refer to figure C.

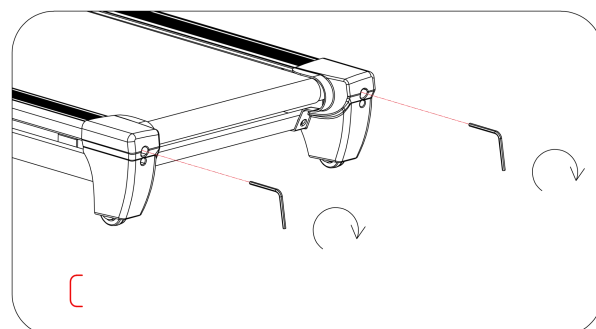

LUBRICATING THE TREADMILL

IMPORTANT NOTE:

You will need to lubricate your treadmill before the first use.


RUNNING BELTS & TREADMILL LUBRICANT:

Lubricating the running board and running belt is essential as the friction between the two affects the life span and function of the treadmill, therefore it is suggested that the running board and belt be inspected regularly.

WARNING: Always unplug the treadmill from the electrical outlet before cleaning, lubricating or repairing the unit.

HOW TO LUBRICATE:

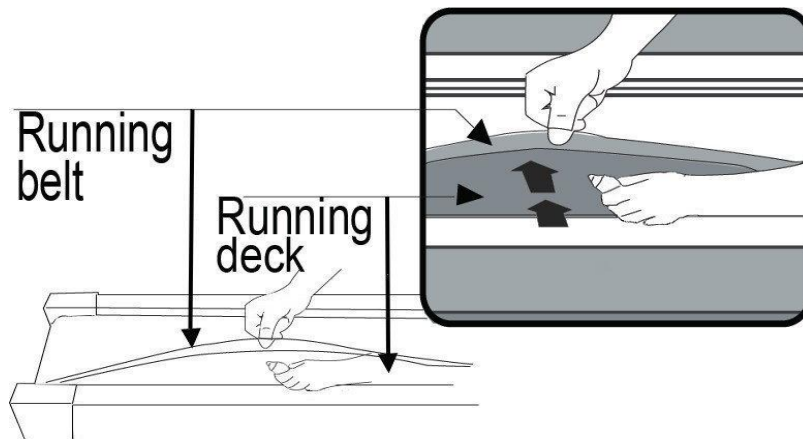


 
 
 



 
 





1. Raise the belt up on one side and apply lubricant to the running deck. Use a rag to thoroughly wipe the lubricant over the running deck. Repeat this process for the other side.
2. The moving parts should turn freely and quietly. Abnormality of moving parts will affect the safety of the equipment. Inspect and tighten bolts regularly.
3. To better maintain the treadmill and prolong its lifespan, it is suggested that maintenance be done on a regular basis.





The following time table is recommended:

Light user (less than 3 hours/ week)	<i>every six months</i>
Medium user (3-5 hours/ week)	<i>every three months</i>
Heavy user (more than 5 hours/ week)	<i>every two months</i>

EXPLODED DRAWING

	78
	85
	86
	87
	88
	89
	96
	91
	92
	93
	79
	70
	97
	98
	101
	102

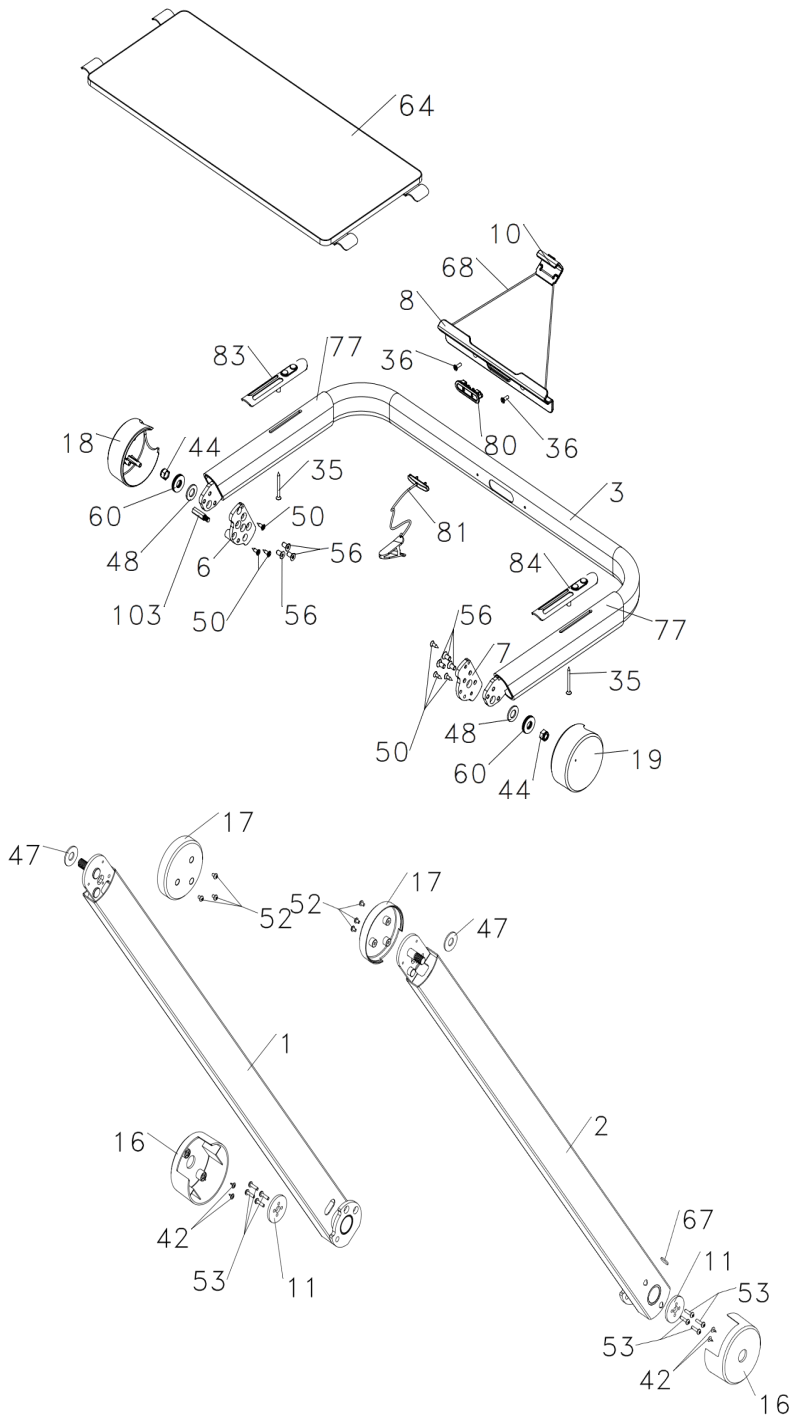

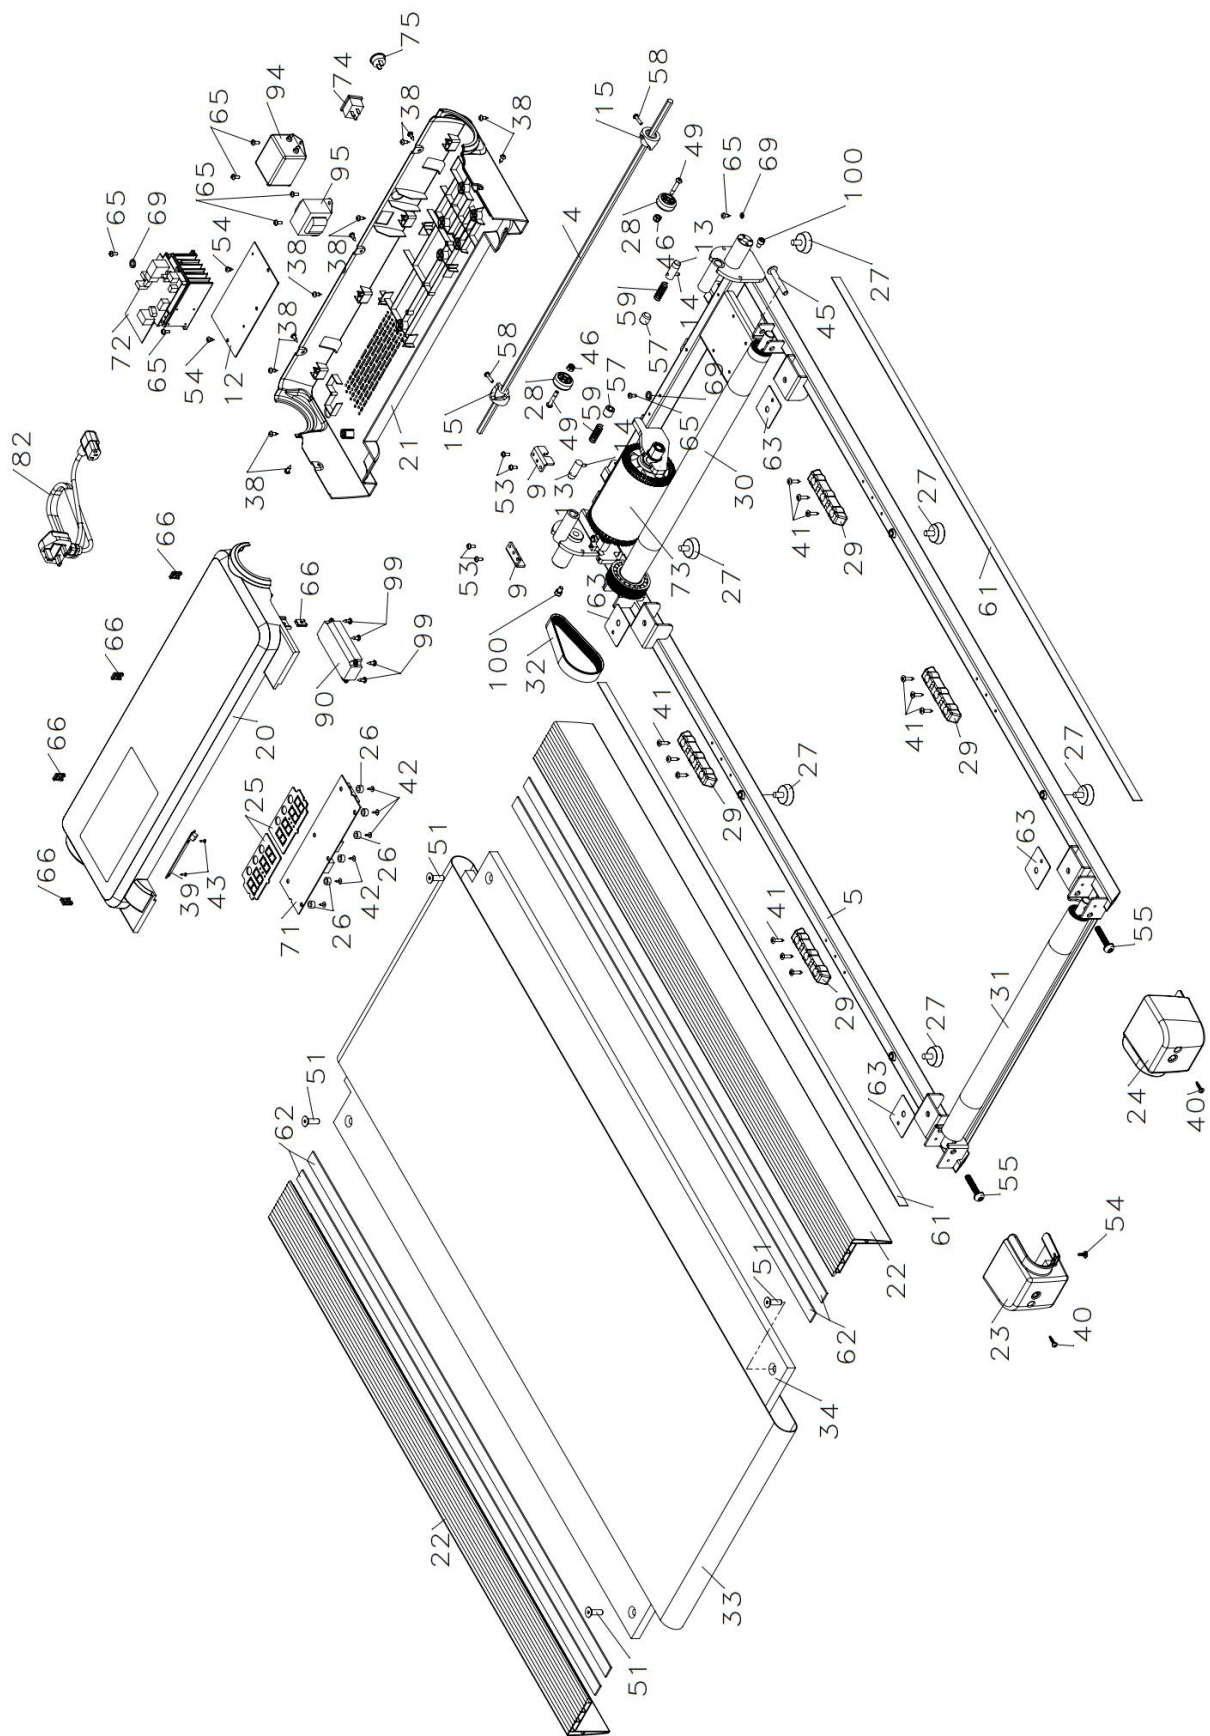

PARTS LIST

No.	Part description	Remark	Qty	No.	Part description	Remark	Qty
1	Left upright tube		1	44	Nut	M12	2
2	Right upright tube		1	45	Bolt	M8*45mm	1
3	Handle bar		1	46	Nut	M5	2
4	Adjustable tube		1	47	Flat washer	Φ12.5*Φ30	2
5	Main frame		1	48	Flat washer	Φ12.5*Φ24	2
6	Handle bar spacing(L)		1	49	Bolt	M5*25mm	2
7	Handle bar spacing(R)		1	50	Screw	ST4.2*15	6
8	Device bottom holder		1	51	Bolt	M8*30mm	4
9	Motor press piece		2	52	Bolt	M4*6mm	6
10	Device top holder		1	53	Bolt	M4*12mm	12
11	Upright tube axis plate		2	54	Screw	ST4.2*13mm	3
12	Control board holder		1	55	Bolt	M8*55mm	2
13	Sprint latch		2	56	Bolt	M6*10mm	6
14	Axis latch		2	57	Bolt	M14*14mm	2
15	Adjustable block		2	58	Bolt	M4*16mm	2
16	Upright side cover		2	59	Spring		2
17	Handle bar inner cover		2	60	Bearing		2
18	Handle bar cover(L)		1	61	Side rail side foam		2
19	Handle bar cover(R)		1	62	Side rail top foam		4
20	Motor top cover		1	63	Running board foam		4
21	Motor bottom cover		1	64	Desktop		1
22	Side rail		2	65	Bolt	M4*10mm	8
23	Back end cover(L)		1	66	Clip buckle		5
24	Back end cover(R)		1	67	Magnet		1
25	Silica gel plate		2	68	Sprint rope		1
26	Spacer		6	69	Spring washer		3
27	Foot pad		6	70	Rope of remote control		1
28	Transport wheel		2	71	PCB board		1
29	Cushion		4	72	Control board		1
30	Front roller		1	73	DC motor		1
31	Back roller		1	74	Power socket		1
32	Motor belt		1	75	Power switch		1
33	Running belt		1	76			
34	Running board		1	77	Handle bar foam		2
35	Screw	ST4.2*45mm	2	78	Remote control		1
36	Bolt	M4*12mm	2	79	Speed switcher		1
37				80	Switch fixing seat		1
38	Screw	ST4.2*16mm	11	81	Switch set		1
39	Light board		1	82	Power wire		1
40	Screw	ST4.2*19mm	2	83	Hand pulse with start/stop		1
41	Flange Screw	ST4.2*19 mm	12	84	Hand pulse with speed		1
42	Screw	ST2.9*9.5mm	10	85	L-shaped wrench		1
43	Screw	ST2.9*10mm	2	86	Allen wrench		1

87	Lubrication oil		1				
88	PCB&Control board connection wire		1				
89	Pulse wire		2				
90	Speaker		1				
91	Switch wire		1				
92	Light connection wire		1				
93	Power socket grounding wire		1				
94	Filter		1				
95	Inductance		1				
96	Filter wire(R)		2				
97	Filter wire(B)		2				
98	Filter grounding wire		1				
99	Screw	ST4.2*10mm	4				
100	Bolt	M6*8	2				
101	Control board grounding wire		1				
102	Magnet ring		1				
103	Spacer		1				

ONE-YEAR LIMITED WARRANTY

The manufacturer warrants this product against defects in materials and workmanship on functional parts, for a period of 1 year from the original date of purchase. Your sales receipt showing the date of purchase of the product is your proof of purchase. Keep it in a safe place for future reference. This warranty is subject to personal use only, commercial or rental applications will not be covered.

This product is made with the highest quality materials and is warranted to be free from defects in materials and workmanship at the time of purchase. This limited warranty applies to products manufactured or distributed by the manufacturer, are delivered in the continental United States or Canada and extends to the original purchaser, or gift recipient. This warranty becomes valid at the time of purchase and terminates either by the specified time frame listed above and/or owner transfer. Any refunds or monetary compensations must be claimed through the place of purchase (retailer), and not through the manufacturer. Any extended warranties (warranties that cover above and beyond this manufacturer warranty) that are sold through a retailer or third party, are not directly correlated with this products' limited warranty, and may be redirected to said retailer or third party for coverage. This warranty extends through the manufacturer of the product, and covers functional parts only. Cosmetics are not covered, unless unequivocally determined it is a workmanship defect. Shipping damage should be addressed with the shipping company, retailer, or place of purchase, not the manufacturer unless the manufacturer was the direct shipper.

The manufacturer's sole obligation under this warranty shall be limited to furnishing the original purchaser replacement parts for units deemed repairable by the supplier's warranty department. The purchaser is responsible for insuring any parts shipped or returned, if desired. The purchaser is responsible to prepay any shipping charges (both ways) including, but not limited to taxes and duties. All exchanged parts and products replaced under this warranty will become the property of manufacturer. The manufacturer reserves the right to change manufacturers of replacement parts or products for use, in order to cover any existing warranty.

The purchaser may be asked to provide the supplier with proof of purchase documents (including the date of purchase) if requested. Any evidence of alteration, erasing, or forgery of proof of purchase documents will be just cause to VOID this limited warranty. Products, in which the serial number has been defaced or removed are not eligible for warranty coverage.

This warranty does not apply if the unit has been subject to negligence, fabrication, misuse, abuse, or repairs, alteration by non-manufacturer authorized personnel, inappropriate installations, or any case beyond the control of the manufacturer. Examples of warranty invalidation may also include, but are not limited to:

- Use of lacquer or paints in (and around) the product
- Product placed on non-approved surfaces
- Electrical requirement deficiencies
- Use on extension cords/timers/surge protectors/GFCI
- Outdoor applications
- Normal wear/tear/weathering
- Pet/consumer accidents
- Purchases from dealers unauthorized by the manufacturer (Authorization in writing)

The manufacturer shall not be liable for any loss due to use (or misuse) of the product or other incidental or consequential costs, expense or damages without irrefutable foundations. Under no circumstances shall the manufacturer or any of its representatives be held liable for injury to any person or damage to any property, however arising. Any implied warranty shall have duration equal of the applicable warranty stated above. Specifications are subject to change without notice or obligation.

This limited warranty gives the original purchaser specific legal rights. Other rights may vary from state to state.

