

One Year Limited Warranty

The manufacturer warrants this product against defects in materials and workmanship on functional parts, for a period of 1 year from the original date of purchase. Your sales receipt showing the date of purchase of the product is your proof of purchase. Keep it in a safe place for future reference. This warranty is subject to personal use only, commercial or rental applications will not be covered.

This product is made with the highest quality materials and is warranted to be free from defects in materials and workmanship at the time of purchase. This limited warranty applies to products manufactured or distributed by the manufacturer, are delivered in the continental United States or Canada and extends to the original purchaser, or gift recipient. This warranty becomes valid at the time of purchase and terminates either by the specified time frame listed above and/or owner transfer. Any refunds or monetary compensations must be claimed through the place of purchase (retailer), and not through the manufacturer. Any extended warranties (warranties that cover above and beyond this manufacturer warranty) that are sold through a retailer or third party, are not directly correlated with this products' limited warranty, and may be redirected to said retailer or third party for coverage.

This warranty extends through the manufacturer of the product, and covers functional parts only. Cosmetics are not covered, unless unequivocally determined it is a workmanship defect. Shipping damage should be addressed with the shipping company, retailer, or place of purchase, not the manufacturer unless the manufacturer was the direct shipper.

The manufacturer's sole obligation under this warranty shall be limited to furnishing the original purchaser replacement parts for units deemed repairable by the supplier's warranty department. The purchaser is responsible for insuring any parts shipped or returned, if desired. The purchaser is responsible to prepay any shipping charges (both ways) including, but not limited to taxes and duties. All exchanged parts and products replaced under this warranty will become the property of manufacturer. The manufacturer reserves the right to change manufacturers of replacement parts or products for use, in order to cover any existing warranty.

The purchaser may be asked to provide the supplier with proof of purchase documents (including the date of purchase) if requested. Any evidence of alteration, erasing, or forgery of proof of purchase documents will be just cause to VOID this limited warranty. Products, in which the serial number has been defaced or removed are not eligible for warranty coverage.

This warranty does not apply if the unit has been subject to negligence, fabrication, misuse, abuse, or repairs, alteration by non-manufacturer authorized personnel, inappropriate installations, or any case beyond the control of the manufacturer. Examples of warranty invalidation may also include, but are not limited to:

- Commercial applications
- Normal wear/tear/weathering
- Pet/consumer accidents

The manufacturer shall not be liable for any loss due to use (or misuse) of the product or other incidental or consequential costs, expense or damages without irrefutable foundations. Under no circumstances shall the manufacturer or any of its representatives be held liable for injury to any person or damage to any property, however arising. Any implied warranty shall have duration equal of the applicable warranty stated above. Specifications are subject to change without notice or obligation.

This limited warranty gives the original purchaser specific legal rights. Other rights may vary from state to state.

Scan QR Code to Visit Registration Page:
www.lifesmartproducts.com/warranty



Questions, problems, missing parts? Contact technical support department at **657-341-0362, 9:00 a.m. - 5 p.m., PST, Monday - Friday** or visit us online at www.lifesmartcomfort.com

Please have your model and serial number ready

M_R8318_2023

 
M_R8375BLK_2023

Printed in China



Massage Chair

R8375
R8375BLK
Manual

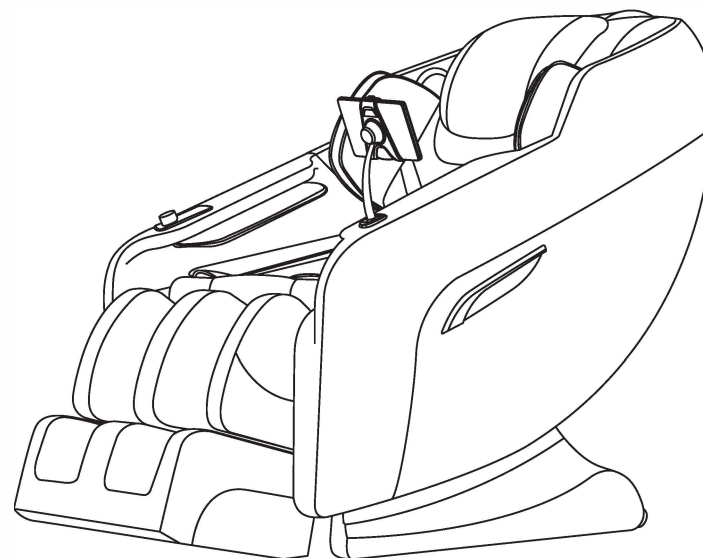

Thank you for choosing our product and your support. In order to understand the directions fully, please read user's manual carefully. And after reading, please keep it for next browsing. We reserve the right of final explanation to the design of product. Dimensions and specifications are subject to change without notice for further improvement.

Contents

Safety	1-6
Preparation Before Use	7-10
Move the Chair	7
Place the Chair	7
Installation	8-10
Bluetooth pairing	10
Components	11-14
Outer Structure	11
Controller	12
Function of Controller	13-14
Shortcut Key	15
Voice Control	16
Cleaning and Maintenance	18
Troubleshoot	19
Specifications	20

IMPORTANT SAFETY INSTRUCTIONS

This massage chair is intended for household only. When using an electrical appliance, basic precautions should always be followed, including the following:

Read all instructions before using this massage chair.

DANGER

-To reduce the risk of electric shock:

- 1) Always unplug this appliance from the electrical outlet immediately after using and before cleaning.
- 2) Never use pins or other metallic fasteners with this appliance.
- 3) Carefully examine the covering before each use. Discard the appliance if the covering shows any sign of deterioration, such as checking, blistering, or cracking.
- 4) Keep Dry - Do not operate in a wet or moist condition.

WARNING

-To reduce the risk of burns, fire, electric shock, or injury to persons:

- 1) An appliance should never be left unattended when plugged in. Unplug from outlet when not in use, and before putting on or taking off parts.
- 2) Do not operate under blanket or pillow. Excessive heating can occur and cause fire, electric shock, or injury to persons.
- 3) Close supervision is necessary when this appliance is used by, on, or near children, invalids, or disabled persons. Keep children away from extended foot support.
- 4) Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
- 5) Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water.
Return the appliance to a service center for examination and repair.
- 6) Do not carry this appliance by supply cord or use cord as a handle.
- 7) Keep the cord away from heated surfaces.
- 8) Never operate the appliance with the air openings blocked. Keep the air openings free of lint, hair, and the like.
- 9) Never drop or insert any object into any opening.

- 10) Do not use outdoors.
- 11) Do not operate where aerosol (spray) products are being used or where oxygen is being administered.
- 12) To disconnect, turn all controls to the off position, then remove plug from outlet.
- 13) Temperatures sufficiently high to cause burns may occur regardless of the control setting. Do not use on an infant or invalid or on a sleeping or unconscious person. Do not use on insensitive skin or on a person with poor blood circulation. Check the skin in contact with the heated area of the appliance frequently to reduce the risk of blistering.
- 14) Do Not Crush - Avoid sharp folds.
- 15) Do not use massager in close proximity to loose clothing or jewelry.
- 16) Keep long hair away from massager while in use.
- 17) Connect this appliance to a properly grounded outlet only. See Grounding Instructions.
- 18) The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.
- 19) An apparatus with CLASS I construction shall be connected to a MAINS socket outlet with a protective earthing connection
- 20) The appliance coupler is used as the disconnect device, the disconnect device shall remain readily operable.
- 21) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 22) If it is not in use for a long time or after use, please turn off the power and pull out the power plug.
- 23) Do not damage, break, over-bend, compress, tighten, wind, rotate or knot the power cord.
- 24) This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

SAVE THESE INSTRUCTIONS

This massage chair is intended for household use only.

● Usage Environment

- Do not use the massage chair in an excessively humid or dusty environment as this may result in malfunction or electric shock.
- Do not use the massage chair in a room with a temperature of 104°F or higher.
- Do not expose the massage chair to heaters, stoves or direct sunlight.
- Place and use the massage chair on an even, non-slip floor.
- The massage chair is designed for home use and not for commercial purposes.

Caution

- The massage chair is to be used indoors only.
- If you use the massage chair in a cold room, do not increase the room temperature abruptly. It is recommended that you increase the temperature gradually to a normal level.
- If the massage chair is stored in a cold place and is being brought into a warm environment, it is advisable to wait one hour before use. This is because its performance may not be at optimum level, as there may be water droplets on the mechanical parts due to condensation. Using the massage chair under such conditions may result in malfunction.

IMPORTANT SAFETY INSTRUCTIONS

● Safety Precautions

- To ensure safe and correct use of the massage chair, do not operate it without reading this operation manual carefully.
- Do not use the massage chair when the upholstery or seat is removed. This may cause injury or malfunction.
- Do not use the massage chair in combination with other therapeutic equipment or electric blanket, etc., as this may result in ineffectiveness or injury.
- Do not use the massage chair an hour before or after eating as this may have adverse effects on the user.
- Do not allow children or pets to play around the massage chair, e.g., behind the backrest, under the seat or leg rest of the massage chair. This may result in injury.

- Do not rest or place heavy objects on the armrests, leg rest or backrest as this may result in malfunction or injury.
- Do not use the massage chair when your body is wet.
- Do not operate the massage chair with wet hands.
It is not recommended to use the massage for more than 30 minutes.
- Do not perform continuous massage on the same spot of your body for more than 5 minutes at a time as this may result in excessive stimulation and may have adverse effects.
- Do not insert your hand or foot along the paths of the massage rollers during use as this may cause injury.
- Stop operation immediately if you experience any discomfort.
- This product is not intended for self-treatment of conditions that should be managed by a qualified health care provider.
- People on medication or with medical conditions, please consult your doctor before use.
- Please do not use the product if you are not feeling well.
- Remove all scarves, neckties, necklaces and jewelry before using the massager.

● People with Medical Conditions

Consult your doctor before use if you:

- are under medical rest as ordered by a doctor.
- have spinal disorders, an abnormal spinal condition or have suffered a spinal injury.
- have back problems.
- have diabetes, osteoporosis or sensory impairment.
- have joint dysfunction.
- have a pacemaker or other electronic medical devices.
- may be pregnant.
- have phlebitis or thrombosis.
- have an increased risk for blood clots.
- had recent surgery.
- have surgical pins, screws, or anything mechanical implanted in your body.

Safety

● Instances When the massage chair Should Not Be Used

In the following events, please switch off the main power switch immediately and disconnect the power cord from the electrical outlet:

- If water is accidentally spilled onto the massage chair. This may result in electric shock or malfunction.
- If the fabric of the backrest is torn and the internal components are exposed.
- If pain or discomfort is felt during massage, stop operation immediately and consult your doctor.
- If you detect any malfunction or any other abnormal condition during operation.
- If there is a power failure. Injury may occur when power is restored unexpectedly.
- If there is lightning.

● Assembly and Repair of the massage chair

- Do not disassemble the backrest cover of the massage chair. Touching the internal components may result in malfunction or electric shock.
- The massage chair must only be professionally serviced or repaired. Do not attempt to disassemble or repair the massage chair yourself.

● Things to Note About the Power Plug and Cord

- Check that the Alternating Current (AC) voltage corresponds with the specifications indicated for the massage chair.
- Do not connect or disconnect the power plug from the electrical outlet with wet hands. This may result in malfunction or electric shock.
- When disconnecting the power plug, pull it by holding the plug, not the cord.
- Although operation will be stopped automatically by the Auto-Timer function, always remember to switch off the main power switch after use.
- Do not place the power cord under the massage chair or any other heavy objects.
- Do not wind the power cord around the massage chair as this may damage the cord and result in a fire or electric shock.
- Do not operate the massage chair with a damaged cord or extension cord.
- Do not use the massage chair if the electrical outlet is loose.
- If the power cord is damaged, it should be replaced by a qualified technician.

 
Safety

● Grounding Instructions

This product must be grounded. If it should malfunction or breakdown, grounding provides a path of least resistance for electric current to reduce the risk of electric shock. This product is equipped with a cord having an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

DANGER - Improper connection of the equipment-grounding conductor can result in a risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the product is properly grounded. Do not modify the plug provided with the product - if it will not fit the outlet, have a proper outlet installed by a qualified electrician.


This product is for use on a nominal 120V~ circuit and has a grounding plug that looks like the plug illustrated in sketch A as following illustration. Make sure that the product is connected to an outlet having the same configuration as the plug. No adapter should be used with this product.

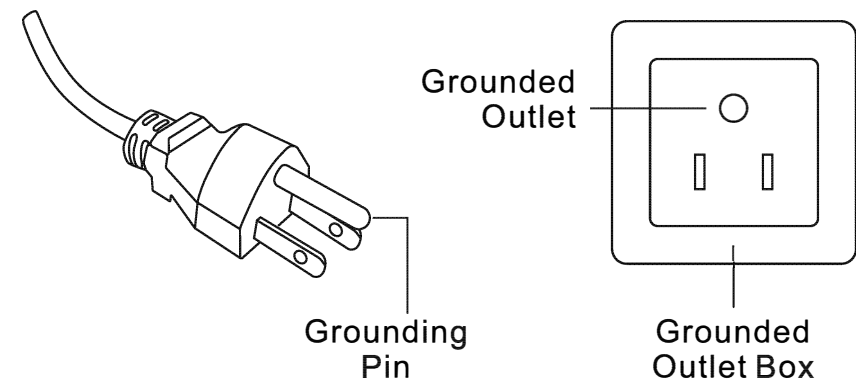

Preparation Before Use


Move the Chair

 - Please turn off the main power and unplug the power from the electrical outlet.
- Tilt the chair backward as shown in the picture below and wheel it to the desired location.
- Please cover the floor with mat when move the massage chair in case of any damage of floor will be made.

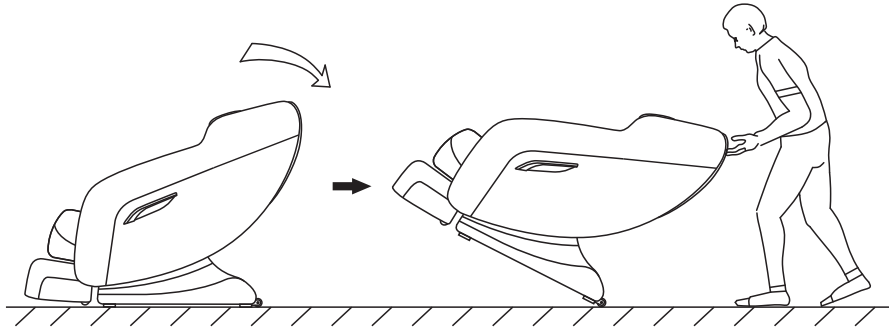

Place the Chair

 Please make sure that there is an allowance of more than 19.68in behind the massage chair, and more than 19.68in in front of the massage chair to allow the backrest to recline without obstruction during operation.

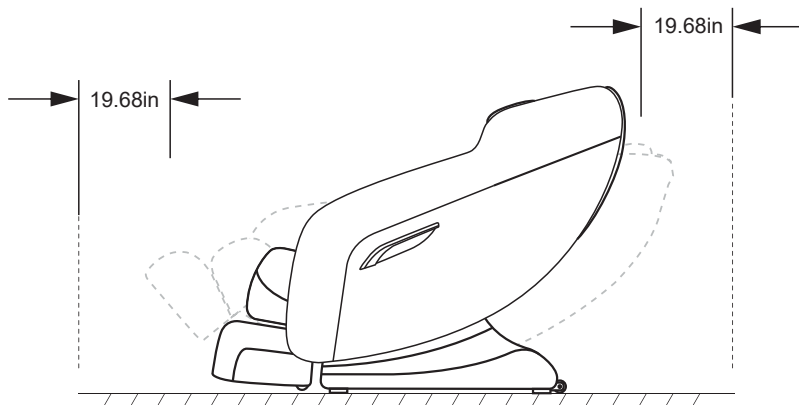


Preparation Before Use

Install Backrest Pad and Pillow Pad

- Attach the upper backrest pad to backrest with zipper.
- Attach the pillow pad to backrest with velcro.



 - Attach the left side of backrest pad to backrest with zipper, same as the other side.

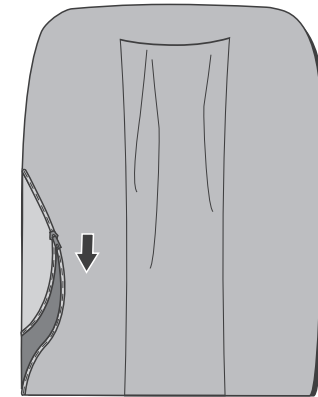

Preparation Before Use

 
Installation of manual bracket

- Aligned holes, lock screw.
- Press down to align the snap.



Remote Controller Connection


- Connect the cable of remote controller with the cable under seat.

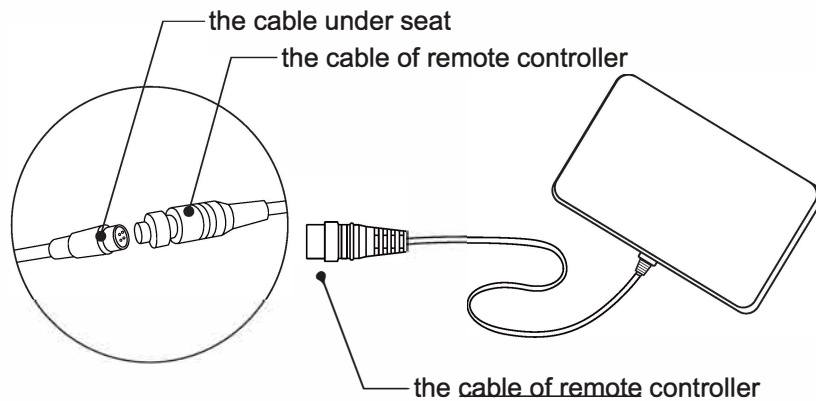

Preparation Before Use


Connect power

 - Plug the power cord into power inlet, turn on the power switch.

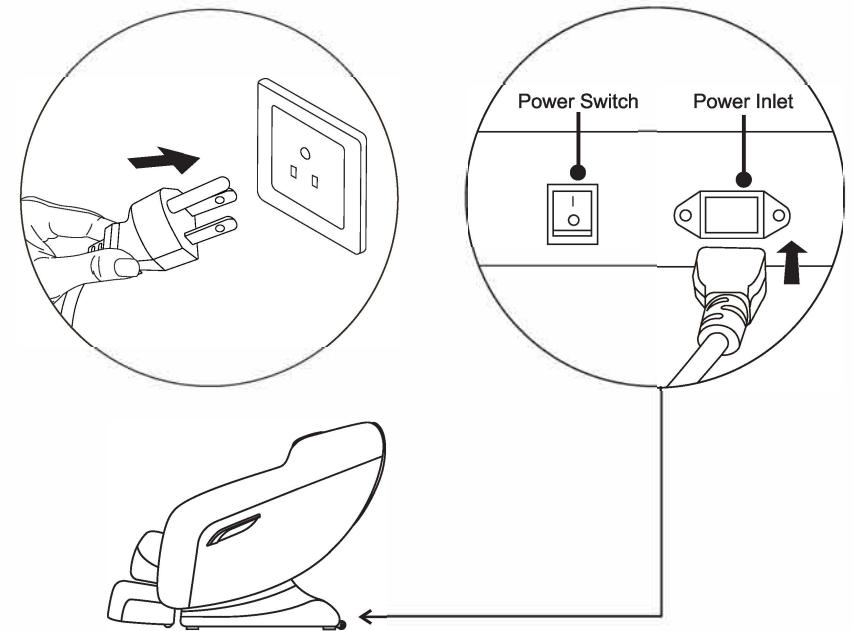



Bluetooth pairing

 On your phone Bluetooth list, choose the model R8375/ R8375BLK to do the pairing, when a sound'du' is heard, the connection is completed.

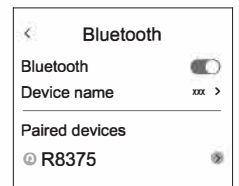

Components

  
Outer Structure

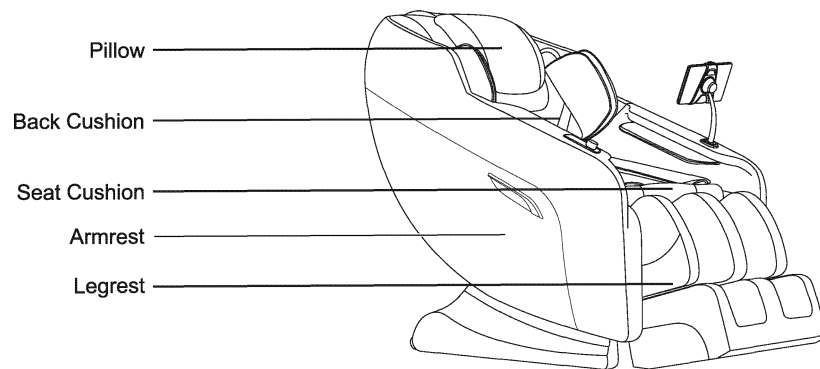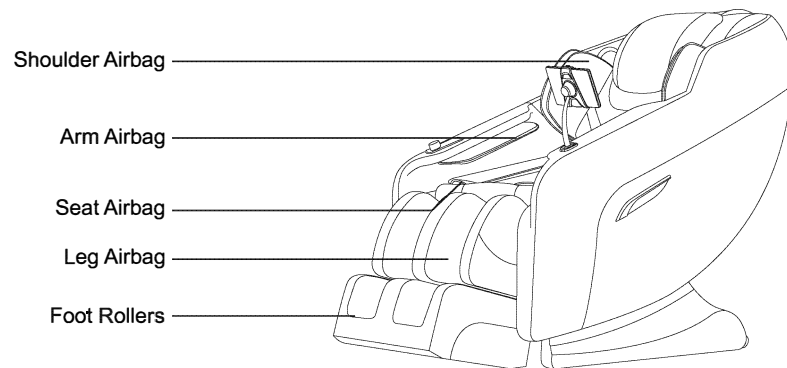

Components

Controller

 (The specific display is subject to the actual product.)

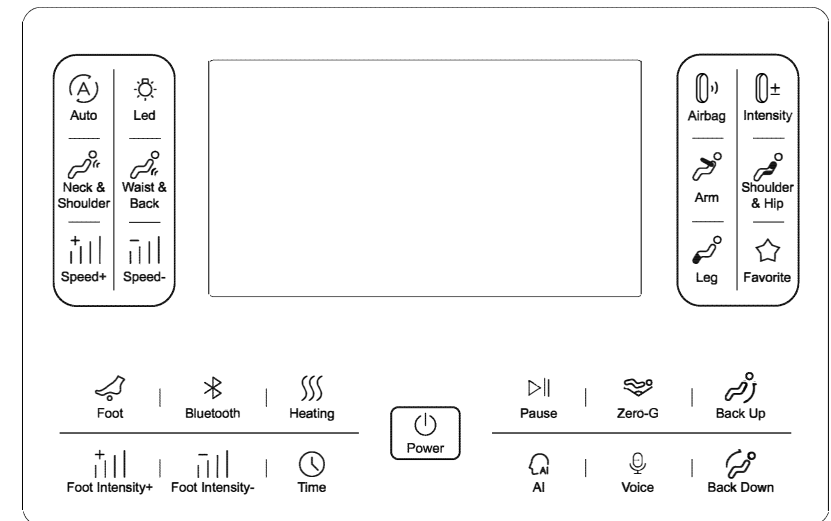

⚠ Caution

- Do not sit, step or place heavy objects on the controller.
- Do not drop the controller. It is recommended that the controller unit be placed in the controller side pocket when not in use.
- Do not exert excessive force on the controller.
- Do not handle the controller with wet hands.
- Do not operate the controller by using sharp-edged or hard objects. It may result in damage.

Components

Function of controller

FUNCTION	ICON	DESCRIPTION
Power		Once your massage chair is connected to an AC wall outlet, you can turn on the chair by power on/off key to start the massage.
Auto		Press this button to switch between multiple automatic modes. Choose the automatic mode you prefer.
Led		Press this button to turn on/off the LED light.
Neck & Shoulder		Press this button to turn on/off massage rollers on the shoulder and neck.
Waist & Back		Press this button to turn on/off massage rollers on the waist and back.
Speed+		Press this button (+) to increase the massage speed.
Speed-		Press this button (-) to increase the massage speed.
Airbag		Press this button to turn on or off the airbag massage function.
Intensity		Press repeatedly to adjust the airbag massage intensity from levels 1 to 3.
Arm		Press this button to turn on/off the arm airbags massage.
Shoulder & Hip		Press this button to turn on/off the shoulder & Hip airbags massage.
Leg		Press this button to turn on/off the leg airbags massage.
Favorite		While a massage program is being performed, hold this button for 3 seconds to record this program to your favorite program, then you can short press this button to start this program. (Notes: only one program can be saved to Favorite Program. The previous recorded program will be cleared when a new one is added.)
Foot		Press this button to turn on/off the roller massage function.
Foot Intensity+		Press this button to increase the massage speed of the roller massage function.
Foot Intensity-		Press this button to decrease the massage speed of the roller massage function.
Bluetooth		Press this button to turn on/off the Bluetooth function.
Heating		Press this button to turn on/off the heating function.

Components

FUNCTION	ICON	DESCRIPTION
Time		Press this button repeatedly to set the massage time (15/20/25/30min).
Pause		Press this button to pause all massage functions. Press again to resume the massage.
Zero-G		Press this button repeatedly to activate one of the three zero gravity positions and to deactivate it.
AI		Press this button to activate or deactivate the voice activation function.
Voice		Press repeatedly this button to change the voice volume.
Back Up		Long press this button to raise the backrest and lower the leg rest. Release it to lock the current angle.
Back Down		Long press this button to lower the backrest and raise the leg rest. Release it to lock the current angle.


Armrest shortcut controls

There are six different automatic massage modes. Select the one you prefer.

FUNCTION	DESCRIPTION
Refresh	Full body massage, the intensity of the roller and airbags is strong.
Relax	Full body massage, the massage intensity of the roller and airbags is medium.
Yoga	Full body massage, this massage simulates a Yoga exercise.
Neck & Shoulder	Partial massage: the focus is on improving neck pain and shoulder muscle strain. The massage is more focused on the neck and shoulder.
Waist & Back	Partial massage: the focus is on the waist and back to improve back pain.
Dream	Full body massage, the intensity of the rollers is light.

Components

 Shortcut Key

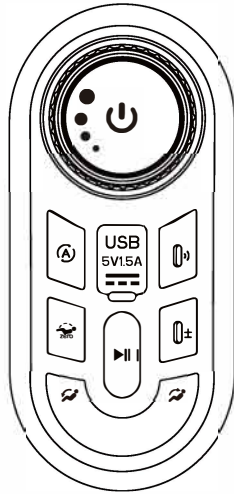

Armrest shortcut controls

FUNCTION	ICON	DESCRIPTION
Power		Press this button to activate or deactivate the massage chair.
Rotation		Rotate clockwise to change the massage chair angle to a more horizontal position. Rotate counterclockwise to change the massage chair angle to a more vertical position. There are three possible adjustments.
Auto		Press this button repeatedly to activate one of the automatic program functions. There are 6. The display on the remote will show the program you have chosen.
Pause		Press this button to pause all massage functions. Press again to resume the massage.
Airbag		Press this button to activate or deactivate the massage airbags.
Intensity		Press this button to adjust the airbag intensity from levels 1 to 3.
Zero-G		Press repeatedly this button to activate one of the three zerogravity modes.
Back Up		Press the backrest down button to lower the backrest. The leg rest will go up at the same time.
Back Down		Press the backrest up button to lower the backrest. The leg rest will go down at the same time.
USB	USB	You can remove the protective cover (tab) to recharge your phone using a USB cable (not provided).

Voice Control

Voice Control

When the massage chair is turned on or in standby mode, say "Hello Lifesmart" to enable the voice control function.

Use the following commands to use the AI voice Control feature:

Command Words	Response by Chair
Hello Lifesmart	Hello
Turn on massage chair / Power On	Please select your favorite program to start your.
Turn off massage chair / Power off	During shutdown, please leave or restart the massage chair after the chair is completely reset. Thank you and hope you enjoy the massage.
Pause massage	Massage paused
Continue to massage	Massage resumed
Turn on Bluetooth	OK, Bluetooth on
Turn off Bluetooth	OK, Bluetooth off
Turn off foot roller	OK, Foot roller off
Turn on foot roller	OK, Foot roller on
Turn on heating	OK, Heating on
Turn off Heating	OK, Heating off
Foot roller off	OK, Foot roller off
Foot roller on	OK, Foot roller on
Increase foot roller intensity	OK, foot roller intensity up
Decrease foot roller intensity	OK, foot roller intensity down
LED light off	LED light off
LED light on	LED light on
OK, Back heating on	OK, Back heating on
Back heating off	OK, Back heating off
Zero gravity	OK, Zero gravity
Back up	OK, Backrest up
Back down	OK, Backrest down
Start airbag massage	OK, Start airbag massage
Stop airbag massage	OK, Stop airbag massage

Voice Control

Massage for five minutes	OK, Massage for five minutes
Massage for ten minutes	OK, Massage for ten minutes
Massage for fifteen minutes	OK, Massage for fifteen minutes
Massage for twenty minutes	OK, Massage for twenty minutes
Massage for twenty five minutes	OK, Massage for twenty five minutes
Massage for thirty minutes	OK, Massage for thirty minutes
Relaxing massage	Start Relaxing massage
Yoga massage	Start Yoga massage
Dream massage	Start Dream massage
Refreshing massage	Start Refreshing massage
Waist & Back massage	Start Waist & Back massage
Neck & Shoulder massage	Start Neck & Shoulder massage
Lower body massage	Start Lower body massage
Upper body massage	Start Upper body massage
Volume up	Volume up
Volume down	Volume down
Maximum volume	Maximum volume
Minimum volume	Minimum volume
Increase strength	Increase back roller intensity
Decrease strength	Decrease back roller intensity
Increase air intensity	Air intensity up
Decrease air intensity	Air intensity down

Cleaning and Maintenance

1. Storing the massage Chair

- With a dry, soft, clean cloth after use.
- Keep the massage chair clean and away from places of high humidity.
- If the massage is not to be used for a long period of time, cover the massage chair with dust cover and unplug its power plug from the electrical outlet.

Caution

- Do not store the massage chair in direct sunlight or in places of high temperature. This may cause the color of the upholstery to fade.
- Do not allow the massage chair remain in contact with vinyl or wallpaper for extended periods of time as this could lead to discoloration.

2. Cleaning the Massage Chair

- Before cleaning, ensure that the main power switch is off and the power plug is disconnected from the electrical outlet.
- Wipe off dust and dirt from the massage with a dry, soft, clean cloth after each use.
- This product can be cleaned thoroughly with a slightly damp cloth.
- Do not iron the upholstery.
- Do not wash the upholstery using a home washing machine as this may result in deterioration of the upholstery's quality.

Caution

- Do not use abrasive cleaning agents like benzene or thinner to the massage chair. This may cause the upholstery to fade.

3. Cleaning the Controller

- Use only a clean, dry cloth to clean the controller.

Caution

- Do not use a wet cloth to clean the controller, This may result in malfunction.

Troubleshoot

If there is still an abnormality after the following checks, to prevent any accident, please stop using the massage chair immediately. Please unplug the power cord from the outlet and contact with the dealer or the nearby customer service center.

Situations	Solutions
The Massage Chair cannot operate even though it has been connected to the power supply.	<ul style="list-style-type: none"> • Check whether the plug is well connected and working well • Check whether the switch on the Massage Chair is turned to position "I".
During operation, the controller is working but not the Massage Chair.	<ul style="list-style-type: none"> • The Massage Chair could be overheated after prolonged use. It will automatically cool down to resume its normal condition. Please turn OFF the power and allow the chair to cool down for 30 to 50minutes.
During operation, both the controller and the Massage Chair are not working.	<ul style="list-style-type: none"> • If the set-time in the Timer is complete, please press the timer function again to resume operation. • Switch OFF power, and switch ON again to activate the Chair.

Specifications

Model	R8375
Rated Voltage	120V~
Rated Frequency Power	60Hz 90W
Maximum Load	265 lb
USB Voltage	5.0V==1.5A
Upright position-Approximately	54.33×28.93×40.55in
Reclined position-Appr	62.60×28.93×32.28in

